
### / INTERFACE CONNECTIONS

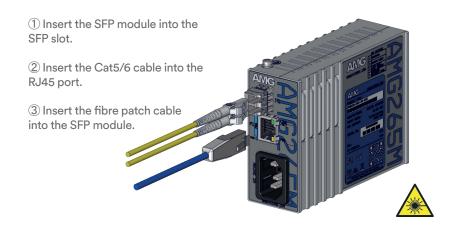

# / PORT SPEEDS

Example part code:



Character	RJ45 Port Speed	SFP* Port Speed	
F	10/100 Base-T(X)	400 (4000 B FV	
G	10/100/1000 Base-T(X)	100/1000 Base-FX	

<sup>\*</sup>SFP's supplied separately. Refer to AMG website and SFP Datasheets for available models.

## / POE CAPABILITIES

Example part code:



Characters	PoE Standard Supported	
None	Non-PoE Model	
AT	IEEE 802.3at 30W Port	
ВТ	IEEE 802.3bt 60/90W Port	

Check the product label to determine the PoE power supported on each port and the units total maximum PoE budget.

# IEEE 802.3at Models

Characters

P30

P90

**PoE Budget** 

30W Max

90W Max

Type 1 & 2 PoE support Mode A PSE only

# IEEE 802.3bt Models

Type 1, 2, 3 & 4 PoE support. Mode A and/or Mode B PSE













Installation Manual - Hardware






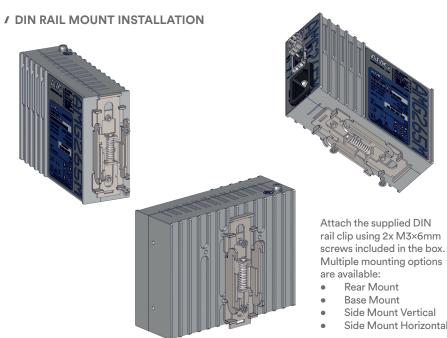



# Side Mount Vertical Side Mount Horizontal Attach the supplied wall bracket using 2x M3x4mm screws included in the box. Multiple mounting options are available: Rear Mount Side Mount Side Mount

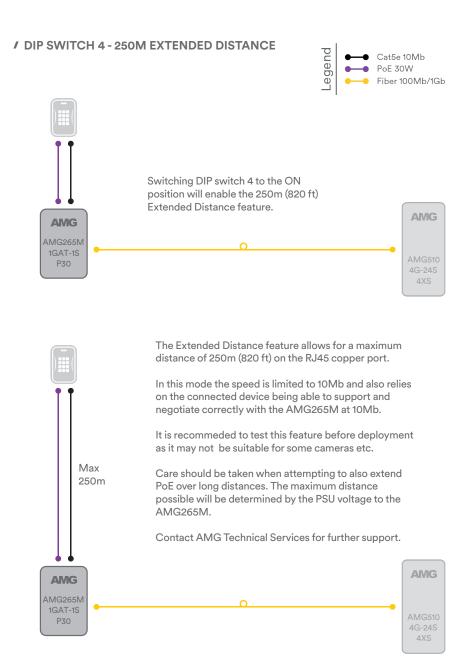



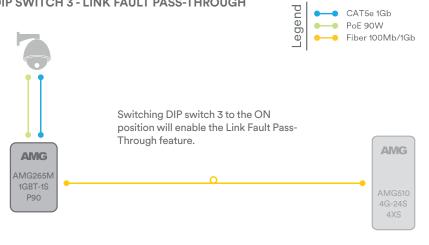

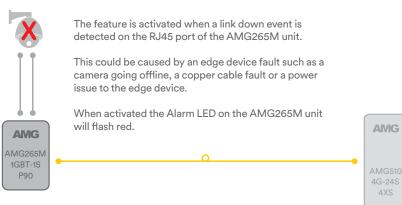

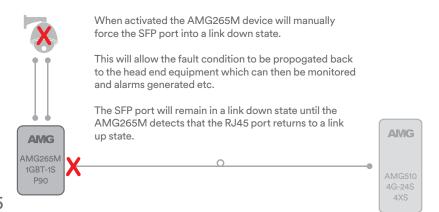

# / POWER

Voltage
85-264 VAC
120-370 VDC

Model Type	Power
AC Models	2.5W Max*

\*Excludes PoE Load





Warning Class 1 Mains Powered Device Earth Must Be Connected!

# / LED INDICATORS



LED	Colour	Description
PWR	Blue	AC input present
ALRM	Red	Alarm condition triggered
SFP LINK/ACT	Off	No SFP link connection
	Green	SFP link present (flashes with data traffic activity)
RJ45 LINK/ACT	Off	No Ethernet link connection
	Green	Ethernet link present (flashes with data traffic activity)
RJ45 POE	Off	No PoE being supplied
	Yellow	PoE is being delivered

### / EARTH PROTECTION




To provide correct protection from ESD and Surge events ensure that the unit is correctly earthed using the provided earth connection point in accordance with local electrical codes & standards. (cable not provided)

### / DIP SWITCHES



Remove DIP switch cover to access 4 DIP switches.

Switch	Description
1	Reserved
2	Remote Device Reset
3	Link Fault Pass-Through
4	250M Extended Distance

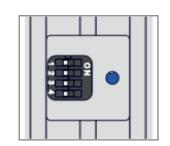

### / DIP SWITCH 2 - REMOTE DEVICE RESET

