

AMG3782GN-DR-SF Instruction Manual

8 Channel Video Receive Unit for a Dual Redundant Single Fibre Ring - includes AMG NMS Network Management Interface



The **AMG3782GN-DR-SF** is a rackmount eight channel video receive unit designed to receive 8 video signals from a singlemode optical fibre ring with Dual Redundant operation.

The **AMG3782GN-DR-SF** is designed to plug into an AMG2005 subrack, which in turn fits into a 19" rack system. It also includes an AMG Management Interface to allow management of the system using the AMG SNMP enabled Management software.

The AMG3741G-DR-SF is designed to be powered using an AMG2003 standalone power supply.

The AMG3782GN-DR-SF is designed to operate with AMG3741-DR-SF or rackmount equivalent AMG3741G-DR-SF four channel video insert units. It may also be used with other combinations of single, dual and four channel video insert units.

An **AMG3782GN-DR-SF** receive unit will 'drop off' up to eight video channels which are being transmitted around the fibre ring from up to eight single channel insert units, or from an equivalent combination of multi-channel insert units.

Contents

Introduction	3
Unit Functional Schematic Video Input Channel Configuration	
Optical Connections	4
Connections	5
Video Output Connections Optical Connections Power Connection	
Front Panel Indicators	6
Power LED Video Output LED's Fibre Optic LED's	
Network Management	7
NMS Operation SNMP Network Alarm Port The Management Interface Alarm Output and Reset Operation	
Physical Information	10
Dimensions Mounting Details Removal / replacement from / to the Case Safety	
Maintenance and Repair	10

Introduction



The **AMG3741G-DR-SF** transmits and receives the optical signals from both primary and secondary optical channels. These optical channels are transmitted on the same optical fibre in opposite directions, operating at different wavelengths. The primary channel operates on 1550nm and the secondary channel on 1310nm.

The **AMG3741G-DR-SF** receives and drops off a data signal transmitted from an **AMG3782GN-DR-SF** receiver. It then inserts video and a data signal onto the outgoing optical signal. In normal operation the video and data signals are transmitted on the primary output and the data received from the primary input. The secondary optical input is independent and is regenerated on the secondary output.

At the AMG3782GN-DR-SF receiver if the primary input signal is not present, the unit will shut down the secondary output to inform the AMG3741G-DR-SF that the primary signal route is not OK. The AMG3741G-DR-SF will then send out the video and data signals on its secondary output in the opposite direction. As the primary input at the AMG3782GN-DR-SF is not present the data signal will now be taken from the secondary optical input, thus maintaining integrity of the data transmission.

Video Input Channel Configuration

At the **AMG3741-DR-SF** or rackmount **AMG3741G-DR-SF** insert unit, video signals present at the BNC inputs can be inserted on one to eight video channels transmitted on the optical fibre. The first video channel number of each insert unit is set by the rotary switch on the front panel of the unit.

It is normal to set each insert unit to a different channel number. If the same number is used twice, an insert unit connected 'down stream' on the primary optical route will 'over-write' any coincident video channels coming from the previous insert unit and those video signals will be lost.

The switch channel numbers 1 to 8, correspond to video channels 1-8. Unused switch channel numbers 0 & 9 duplicate video channel selections 1 & 8 respectively. i.e. setting switch to position 0 or 1 selects video channel 1 and setting switch to position 8 or 9 selects channel 8.

AMG Systems Ltd. reserves the right to make changes to this document without notice. The information herein is believed to be accurate. No responsibility is assumed by AMG for its use.

Optical Connections

The **AMG3782N-DR-SF** or rackmount **AMG3782GN-DR-SF** is designed to be connected in a ring or point to point system. In a ring system, single, dual and four channel insert units respectively can be combined to make up an 8 channel video transmission system as illustrated below.



If a fibre link is broken, operation of the ring continues by making use of the secondary optical fibre route as below:



If multiple breaks occur, operation is maintained with all the units still physically connected to the receiver. For the scenario shown below camera signals and control would now be lost from cameras 1, 2 and 3 as there is now no physical connection between the transceivers and the receiver. However operation of cameras 4,5,6,7 and 8 remains fully functional.



AMG Systems Ltd. reserves the right to make changes to this document without notice. The information herein is believed to be accurate. No responsibility is assumed by AMG for its use.

Page 4 of 12

AMG3782GN-DR-SF Instruction Sheet D16936-01.doc

Connections

Video Output Connections

No. of channels	8
Connectors	75 ohm BNC Socket.
Output Impedance	75 ohm terminated.
Output Level	1 Volt p-p nominal
Frequency Response	10Hz to 7MHz.

Optical Connections

PRIMARY OPTO OUT

Connector	LC/PC
Primary Optical Launch Power	-5dBm
Wavelength	1550nm
Secondary Optical Sensitivity	-22dBm
Wavelength	1310nm

PRIMARY OPTO IN

Connector	LC/PC
Primary Optical Sensitivity	-22dBm
Wavelength	1550nm
Secondary Optical Launch Power	-5dBm
Wavelength	1310nm

Power Connection

Connector Type	2.1mm screw lock long power jack - centre positive
Connector Partno.	Switchcraft S761K, AMG G16125-00
Supply Voltage	13.5 to 18.0 Volts DC.
Maximum Power	10 Watts

Front Panel Indicators

Power LED

PowerGreen Off	-	unit powered no power applied to unit
Video Output LED's		video signal present on output PNC
Org Off	-	channel present but no video on O/P BNC no video channel present
Fibre Optic LED's		
Primary Opto Sync TXGreen Off	-	optical channel transmitting optical channel not transmitting
Primary Opto Sync RXGreen Org Off	- - -	optical channel receiving optical channel receiving but not sync. optical channel not receiving
Secondary Opto Sync TXGreen Off	-	optical channel transmitting optical channel not transmitting
Secondary Opto Sync RXGreen Org Off	- - -	optical channel receiving optical channel receiving but not sync. optical channel not receiving

Network Management

Network Management of the system is provided by the AMG Management Interface which allows Management using the AMG SNMP enabled Management software.

NMS Operation

Requires Network Management "N" option in each Rx (Receive) or Tx (Transmit) unit. Recommended for Dual Redundant Options to give knowledge of failure Rx collects information regarding all attached Tx units

Interface

- 9 Way D-type management port on each Rx or Tx
- RS-232 or RS-485 on Management Port
- Multiple Rx/Tx units use RS-485 and effectively parallel all the RS-485 ports together
- Connect to PC RS-232 Port via RS-485/RS-232 convertor

Proprietary GUI

- Loss of unit
- Loss of Optical Input
- Loss of Video Input

SNMP

SMNP Compatibility: SMNP Version 1 AMG3700 Device do NOT act as SNMP Agents

PC running AMG NMS software is the only 'true' SNMP Agent

- Provides Proxy access to all AMG devices
- SNMP Community String used to differentiate between AMG devices

Network Alarm Port

Alarm Output: Normally Closed

Opens when loss of :

- Video at any insert node
- Primary optical input at any node
- Secondary optical input at any node
- Any node through a power down
- Power at the receiver

Closed by: Reset

The Management Interface

The Management Interface is fitted to AMG receivers / transmitters and is signified by a 'N' in the part number

Page 7 of 12

Each management interface, thus each receiver or transmitter, has an ID number with is identified below the management port. This ID number is used by the AMG Network Management System (NMS) to identify the unit.

The physical interface is a 9 way female D-type connector. It supports either RS-232 or RS-485.

Management Port Pin-out:

Pin Number	RS-232 Connection	RS-485 Connection
1	-	Data B (+)
2	RD (data out of port)	Data A (-)
3	TD (data into port)	-
4	Connect to DTR held -ve or shorted	-
	to ground	
5	SG (signal ground)	SG (signal Ground)
6	Alarm Output	Alarm Output
7	Alarm Output	Alarm Output
8	Alarm reset (Gnd)	Alarm reset (Gnd)
9	Alarm reset	Alarm reset

For multiple Management Ports it is recommended that the RS-485 interface is used with each RS-485 pair connected in parallel. In this case an RS-485 to RS-232 / USB converter is required in order to connect to a standard PC Comms. Port.

The time delay between receiving a data request and sending out a response from the port is 625µs. Therefore any RS-485 converter should have a 'turn around' time or 'transmit dwell' time equal to or less than 625µs.

Recommended RS-485 Converter's are:

RS-485 to RS-232

Dataforth DCP485-S: Available in the UK from http://uk.farnell.com/ Order No. 300-9348

Settings on the DCP485-S:

- RS-485 Switch Settings: 1-UP, 2-DOWN, 3-DOWN, 4-UP, 5-DOWN, 6-DOWN, 7-DOWN, 8-UP
- RS-232 Switch Settings: 1-DOWN, 2-UP, 3-DOWN, 4-UP
- DCE/DTE set to DCE.

RS-485 to USB

B&B 485USBTB-2W: Available in Europe from http://www.bb-europe.com/ Order No. 485USBTB-2W

Connections to management port:

Management Port	DCP485-S	485USBTB-2W
1	2 or 4	B+
2	3 or 5	A-
5	GND	GND

NOTES:

On the DCP485-S, pins 3 and 5 are connected together and pins 2 and 4 are connected together. On the 485USBTB-2W, there are 2 pairs of terminals both labeled A-, B+, either pair may be used.

Alarm Output and Reset Operation

The alarm output and reset is designed to indicate a change of state of the fibre loop or spur attached to the receiver. The Alarm output is a volts free contact relay output (rating: 0.5A at 125VAC or 1A at 24VDC). It normally open, which means that when not powered the contacts will be open circuit.

On power up the contacts will close and will remain closed for up to 5 seconds. During this time the receiver will monitor and record the state of the AMG transmit units connected to the receiver.

The contacts will then remain closed until there is a change from this recorded state. A change of state would be:

- Addition or loss of video at any insert node
- Addition or loss of primary optical input at any node
- Addition or loss of secondary optical input at any node
- Power up or down of any node
- Loss of power at the receiver

Following a change of state the contacts will remain open, regardless of whether the alarm condition reverts back to its previous state, until the a reset signal is presented to the alarm input connections. The alarm reset input is biased at 5V via a $1k\Omega$ resistor. To reset the alarm, the alarm reset is required to be pulled to ground, either by a volt-free contact or an open collector output. The alarm output will be held in a closed state whilst the alarm reset is connected to ground.

On release of the alarm reset, the alarm output will remain in a closed state until the next change of state to the AMG transmit unit connected to the receiver. The alarm output may not register a change of state which happens within 5 seconds of release of the alarm reset.

Physical Information

Dimensions

Height	.3U Plug-in
Width	.14HP
Depth	.170mm excluding connectors
Weight	.1000grams

Mounting Details

The unit is designed to be mounted within an AMG2009 or AMG2015 Subrack on standard card guides.

Removal / replacement from / to the Case

Note: - The AMG unit PCB's are static sensitive. Handle with proper care and use normal electrostatic discharge (ESD) procedures. Use properly grounded protection (for example, wrist straps) when handling the PCB.

To remove units from the case to access the data expansion boards and the daughter boards, remove the 2 or 4 fixing screws on the rear panel and slide the PCB's out of the case. Ensure that the fibres do not snag or get trapped.

To replace the PCB's into the case, slide the PCB's gently into the case aligning the boards with the appropriate slots. Ensure that the fibre do not snag or get trapped.

Safety

AMG Optical Fibre Products use Class 1 laser systems in accordance with EN 60825-2:2000.

It is always advisable to follow good practice when working with optical fibre systems. This includes:

- Do not stare with unprotected eyes or with any unapproved collimating device at fibre ends or connector faces, or point them at other people.
- Use only approved filtered or attenuating viewing aids

For other safety issues and advice on good practice associated with optical fibre systems, please see EN 60825-2:2000 or your local safety officer.

Maintenance and Repair

There are no user serviceable parts within AMG products. See unit data sheet for full specification.

In case of problem or failure, please call your local support centre or contact: **AMG Systems Ltd.** at 3 The Omega Centre, Stratton Business Park, Biggleswade, Beds., SG18 8QB, UK.

Phone	+44 (0) 1767 600 777
Technical Support	+44 (0) 1767 604 491
Email	techsupport@amgsystems.com

AMG Systems Ltd. reserves the right to make changes to this document without notice. The information herein is believed to be accurate. No responsibility is assumed by AMG for its use.

Page 10 of 12 AM

This page is intentionally blank.

AMG Systems Ltd. reserves the right to make changes to this document without notice. The information herein is believed to be accurate. No responsibility is assumed by AMG for its use.

Page 11 of 12

AMG3782GN-DR-SF Instruction Sheet D16936-01.doc

This page is intentionally blank.

AMG Systems Ltd. reserves the right to make changes to this document without notice. The information herein is believed to be accurate. No responsibility is assumed by AMG for its use.

Page 12 of 12