


## Receive Unit with one Bi-directional Data Channel and two Uni-directional Alarms for a Multimode Fibre Link

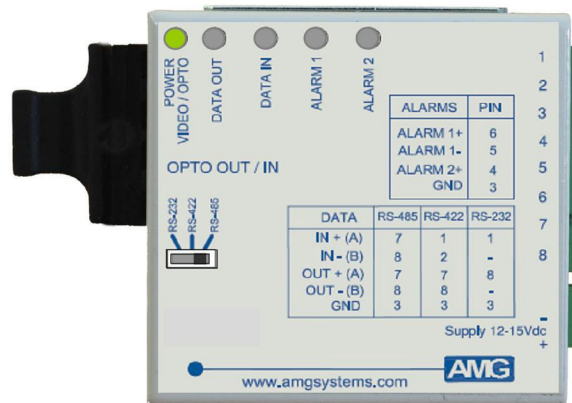

The **AMG5416** is a compact standalone receive unit designed to transmit and receive 1 data signal plus 2 Uni-directional alarms over one Multimode optical fibre.

The **AMG5416** is designed to be powered using an **AMG2001** standalone power supply.

The **AMG5416** is designed to operate with an **AMG5415** single channel transmit unit in a point to point configuration.

# Contents


<b>Introduction</b>	<b>3</b>
Unit Functional Schematic.....	3
Optical Connection .....	3
<b>Connections</b>	<b>4</b>
Optical Connections Multimode.....	4
Power Connection .....	4
Data and Alarm Channel Connections .....	4
<b>Front Panel Indicators</b>	<b>5</b>
Power / Opto LED.....	5
Low Speed Data LEDs .....	5
Alarm LEDs.....	5
<b>Data and Alarm Channel Configuration</b>	<b>6</b>
Data Channel Configuration .....	6
Data Interface Connections .....	6
Alarm Channel Configuration .....	7
Alarm Interface Connections .....	7
<b>Physical Information</b>	<b>8</b>
Dimensions .....	8
Mounting Details .....	8
<b>Safety</b>	<b>8</b>
<b>Maintenance and Repair</b>	<b>8</b>

## Introduction

### Unit Functional Schematic

The **AMG5416** transmits 1 data channel to and receives 2 uni-directional alarm signals from the **AMG5415** transmit unit.

It also receives 1 data channel transmitted from the **AMG5415**.

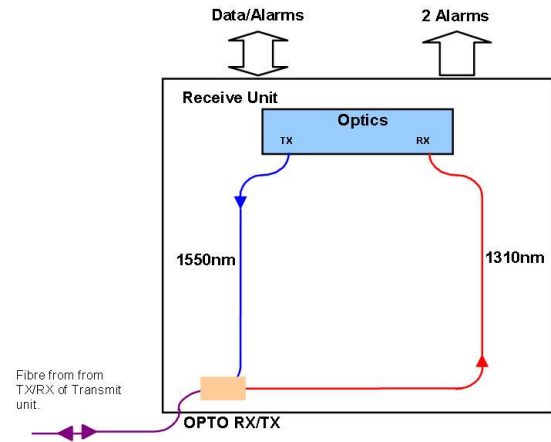

### Optical Connection

The **AMG5416** connections are illustrated in the following example which shows an **AMG5415** transmit unit together with an **AMG5416** standalone receive unit configured as a single channel point to point system.



## Connections

---

### Optical Connections Multimode

No. of Optical Connections ..... 1  
Optical Fibre ..... Multimode 50/125 or 62.5/125\*\*  
Connector ..... SC/PC

Minimum Optical Launch Power ..... -10dBm  
Transmit Wavelength ..... 1550nm

Minimum Optical Sensitivity ..... -30dBm  
Receive Wavelength ..... 1310nm

Minimum Optical Dynamic Range ..... 20dB.

\*\*Note: the transmission distance is limited by the bandwidth of the Multimode optical fibre. The optical data rate is 155Mbps/s, which may restrict operation to a maximum fibre length of 7km, although in most cases the units will operate successfully over longer fibre lengths. It is advisable however for distances greater than 7km, to have the optical fibre tested.

### Power Connection

Connector Type ..... Removable 2-pin, 3.81mm, Screw Terminal  
Connector Partno. .... Phoenix 1803578  
Supply Voltage ..... +12 to +15Vdc  
Maximum Power ..... 1.5 Watts

### Data and Alarm Channel Connections

No. of Data Channels ..... 1  
No. of Alarms ..... 2

Connector ..... Removable 8-pin, 3.81mm, Screw Terminal  
Connector Partno. .... Phoenix 1803633

Data Interface ..... RS-232, RS-422 or R-S485. Selected by slide switch on front panel.

RS-232 – Switch Position - Left  
RS-422 – Switch Position - Centre  
RS-485 – Switch Position - Right

### Alarm Outputs

Each alarm output uses a Solid-state relay, with a maximum load current of 150mA at 125Vac/dc and  $R_{on} < 6.5\Omega$ .

## Front Panel Indicators

---

### Power / Opto LED

Power / Opto.....	Green	-	Unit powered, Opto sync.
	Red	-	Unit powered, no Opto sync.
	Off	-	No power applied to unit

### Low Speed Data LEDs

Data Present IN (RS485 or RS422) ....	Green	-	logic zero (+V, -V) present on IN+, IN-
	Red	-	logic one (-V, +V) present on IN+, IN-
	Off	-	tri-state off or no connection on IN+, IN-

Data Present IN (RS232) .....	Green	-	logic zero (+V) present on input IN+
	Red	-	logic transitions present on input IN+
	Off	-	logic one (-V) present on input IN+

IN corresponds to the data signals being transmitted onto the optical fibre.

Data Present OUT (RS485 or RS422)	Green	-	logic zero (+V, -V) present on OUT+, OUT-
	Red	-	logic one (-V, +V) present on OUT+, OUT-
	Off	-	tri-state off or no connection on OUT+, OUT-

Data Present OUT (RS232) .....	Green	-	logic zero (+V) present on OUT+
	Red	-	logic transitions present on OUT+
	Off	-	logic one (-V) present on OUT+

OUT corresponds to the data signals being received from the optical fibre.

### Alarm LEDs

ALARM 1 OUT .....	Green	-	Alarm ON / Contacts closed.
	Off	-	Alarm OFF / Contacts open.

ALARM 2 OUT .....	Green	-	Alarm ON / Contacts closed.
	Off	-	Alarm OFF / Contacts open.

## Data and Alarm Channel Configuration

The **AMG5416** sends and receives data to/from an **AMG5415** or rackmount equivalent **AMG3743R** single channel transmit unit. The physical data interface RS-485, RS-422 or RS-232 is selectable by the user with the slide switch on the front panel.

2 uni-directional alarms are also provided, each of which can receive an on/off signal from an **AMG5415** and are typically used to convey contact closure status. Each alarm output uses a Solid-state relay, with a maximum load current of 150mA at 125Vac/dc and  $R_{on} < 6.5\Omega$ .

### Data Channel Configuration

The data channel provides an RS-232, RS-422 (full duplex, four wire) or RS-485 (half duplex, two wire) interface defined by the corresponding mode on the front panel. The data channel as shipped from the factory is set up for RS-485 operation unless otherwise requested.

The data input for both the RS-485 and the RS-422 modes detects a tri-state input condition by monitoring the differential voltage level across the input. A differential level below 600mV positive or negative will be detected as a tri-state condition. A level above 600mV positive or negative will be detected as a logic 1 or logic 0 respectively. It is important therefore to terminate the RS-485 bus or the RS-422 input bus using 120 $\Omega$  if a pre-bias is present on the RS-485 or RS-422 bus.

A large number of third party equipment manufacturers apply a pre-bias on their RS-485 bus. This pre-bias is applied by pulling one arm of the RS-485 bus high (+5 volts) and the other arm low (0 volts) using high value resistors within the third party equipment. In order to ensure that the AMG equipment detects a tri-state condition, then these resistors should have a value above 5k $\Omega$ . If the third party bias resistors are less than 750 $\Omega$  the bus can be multiple terminated as required to ensure that a tri-state level is detected.

The system detects a tri-state input condition on the data channel bus when in RS-485 or RS-422 mode.

### Data Interface Connections

Connector Pin No.	Data Channel		
	RS-485 [switch right]	RS-422 [switch mid]	RS-232 [switch left]
1		IN + (A)	IN
2		IN - (B)	
3	GND	GND	GND
4			
5			
6			
7	IN/OUT + (A)	OUT + (A)	
8	IN/OUT - (B)	OUT - (B)	OUT

Note: (A) or (B) in brackets in the above table refers to RS-485 / RS-422 data specification.

### **Alarm Channel Configuration**

The **AMG5416** provides 2 uni-directional alarm outputs.

Each alarm output provides a set of contacts from a solid state relay.

**Alarm Output 1** : provides a pair of normally open, volt-free contacts.

**Alarm Output 2** : provides a normally open, switched contact to Ground (0V / GND).

### **Alarm Interface Connections**

Connector Pin No.	Alarm Interface	
	Alarm 1	Alarm 2
1		
2		
3		ALARM 2 GND
4		ALARM 2 OUT +
5	ALARM 1 OUT -	
6	ALARM 1 OUT +	
7		
8		

## **Physical Information**

---

### **Dimensions**

Height.....56mm  
Width.....55mm (excluding connectors)  
Depth .....25mm  
Weight.....200grams

### **Mounting Details**

The unit is designed to be mounted using the clip holder supplied, which can be fixed to a wall or panel using 2 off 4mm screws.

## **Safety**

---

AMG Optical Fibre Products use Class 1 laser systems in accordance with EN 60825-2:2000.

It is always advisable to follow good practice when working with optical fibre systems. This includes:

- Do not stare with unprotected eyes or with any unapproved collimating device at fibre ends or connector faces, or point them at other people.
- Use only approved filtered or attenuating viewing aids

For other safety issues and advice on good practice associated with optical fibre systems, please see EN 60825-2:2000 or your local safety officer.

## **Maintenance and Repair**

---

There are no user serviceable parts within AMG products. See unit data sheet for full specification.

In case of problem or failure, please call your local support centre or contact: **AMG Systems Ltd.** at 3 The Omega Centre, Stratton Business Park, Biggleswade, Beds., SG18 8QB, UK.

Phone	+44 (0) 1767 600 777
Technical Support	+44 (0) 1767 604 491
Email	techsupport@amgsystems.com