


## Single Channel Video Transmit Unit with one Bi-directional Data Channel plus one Bi-directional Alarm for a Multimode Fibre Link

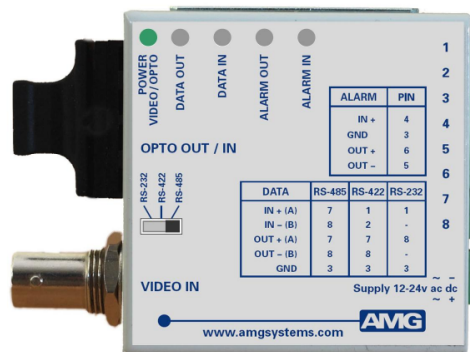

The **AMG5613** is a compact standalone one channel video transmit unit designed to transmit 1 video signal and transmit and receive 1 data signal plus 1 bi-directional alarm over one Multimode optical fibre.

The **AMG5613** is designed to be powered using an **AMG2001** standalone power supply.

The **AMG5613** is designed to operate with an **AMG5614 / AMG5614R** single channel or **AMG5624 / AMG5624R** dual channel video receive unit in a point to point configuration. The R suffix in the partno. indicates a rackmount configuration.

# Contents


<b>Introduction</b>	<b>3</b>
Unit Functional Schematic.....	3
Optical Connection .....	3
<b>Connections</b>	<b>4</b>
Video Input Connections .....	4
Optical Connections .....	4
Power Connection .....	4
Data and Alarm Channel Connections .....	4
<b>Front Panel Indicators</b>	<b>5</b>
Power LED Video & Data .....	5
Low Speed Data LEDs .....	5
Alarm LEDs.....	5
<b>Data and Alarm Channel Configuration</b>	<b>6</b>
Data Channel Configuration .....	6
Data Interface Connections .....	6
Alarm Channel Configuration .....	7
Bi-directional Alarm Interface Connections .....	7
<b>Physical Information</b>	<b>8</b>
Dimensions .....	8
Mounting Details .....	8
<b>Safety</b>	<b>8</b>
<b>Maintenance and Repair</b>	<b>8</b>

# Introduction

## Unit Functional Schematic

The **AMG5613** transmits 1 video plus 1 data and 1 bi-directional alarm signal to the **AMG5614** receive unit.

It also receives 1 data and 1 bi-directional alarm signal from the **AMG5614**.

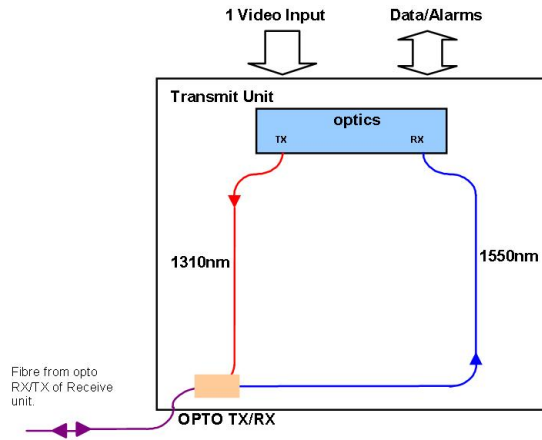

## Optical Connection

The **AMG5613** connections are illustrated in the following example which shows two transmit units together with an **AMG5624R** two channel rackmount receive unit configured as a dual channel point to point system.



## Connections

---

### Video Input Connections

No. of channels ..... 1  
Connector ..... 75 ohm BNC Socket.  
Input Impedance ..... 75 ohm terminated.  
Input Level ..... 1 volt p-p nominal  
Frequency Response..... 10Hz to 7MHz.

### Optical Connections

No. of Optical Connections ..... 1 per video channel  
Minimum Optical Fibre ..... Multimode 50/125 or 62.5/125\*\*  
Connector Type ..... SC/PC

Minimum Optical Launch Power ..... -10dBm  
Transmit Wavelength ..... 1310nm

Optical Link Dynamic Range ..... 20dB.

\*\*Note: the transmission distance is limited by the bandwidth of the Multimode optical fibre. The optical data rate is 155Mbps/s, which may restrict operation to a maximum fibre length of 7km, although in most cases the units will operate successfully over longer fibre lengths. It is advisable however for distances greater than 7km, to have the optical fibre tested.

### Power Connection

Connector Type ..... Removable 2-pin, 3.81mm, Screw Terminal  
Connector Partno..... Phoenix 1803578  
Supply Voltage..... +12 to +15Vdc  
Maximum Power ..... 1.5 Watts

### Data and Alarm Channel Connections

No. of Data Channels ..... 1  
No. of Alarm Channels..... 1

Connector ..... Removable 8-pin, 3.81mm, Screw Terminal  
Connector Partno..... Phoenix 1803633

Data Interface ..... RS-232, RS-422 or R-S485. Selected by slide switch above the BNC connector.

RS-232 – Switch Position - Left  
RS-422 – Switch Position - Centre  
RS-485 – Switch Position - Right

Alarm Input ..... Contact Closure pull-up is 330R to +3V3  
Alarm Output..... Solid-state Relay, maximum 150mA at 125Vac/dc, Ron < 6.5Ω

## Front Panel Indicators

---

### Power LED Video & Data

Power / Video / Opto .....	Green	-	Video input & Opto sync.
	R/G	-	Opto sync. but no Video input.
	G/R	-	Video input but no Opto sync.
	Red	-	Unit powered, no Video or Opto sync.
	Off	-	No power applied to unit

### Low Speed Data LEDs

Data Present IN (RS485 or RS422) ....	Green	-	logic zero (+V, -V) present on IN+, IN-
	Red	-	logic one (-V,+V) present on IN+, IN-
	Off	-	tri-state off or no connection on IN+, IN-
Data Present IN (RS232) .....	Green	-	logic zero (+V) present on input IN+
	Red	-	logic transitions present on input IN+
	Off	-	logic one (-V) present on input IN+

IN corresponds to the data signals being transmitted onto the optical fibre.

Data Present OUT (RS485 or RS422)	Green	-	logic zero (+V,-V) present on OUT+, OUT-
	Red	-	logic one (-V,+V) present on OUT+, OUT-
	Off	-	tri-state off or no connection on OUT+, OUT-
Data Present OUT (RS232) .....	Green	-	logic zero (+V) present on OUT+
	Red	-	logic transitions present on OUT+
	Off	-	logic one (-V) present on OUT+

OUT corresponds to the data signals being received from the optical fibre.

### Alarm LEDs

Alarm IN.....	Green	-	Alarm ON / Contacts closed.
	Off	-	Alarm OFF / Contacts open.
Alarm OUT.....	Green	-	Alarm ON / Contacts closed.
	Off	-	Alarm OFF / Contacts open.

## Data and Alarm Channel Configuration

The **AMG5613** transmit unit sends and receives data to/from an **AMG5614** or rackmount equivalent **AMG5614R** receive unit. The physical data interface RS-485, RS-422 or RS-232 is selectable by the user with the slide switch on the front panel.

There is also one bi-directional alarm channel provided which sends/receives on/off signals to the **AMG5614** receive unit and is typically used to transmit/receive contact closure status.

### Data Channel Configuration

The low speed data channel provides an RS-232, RS-422 (full duplex, four wire) or RS-485 (half duplex, two wire) interface defined by the mode switch on the front panel. The data channel as shipped from the factory is set up for RS-485 operation unless otherwise requested.

The data input for both the RS-485 and the RS-422 modes detects a tri-state input condition by monitoring the differential voltage level across the input. A differential level below 600mV positive or negative will be detected as a tri-state condition. A level above 600mV positive or negative will be detected as a logic 1 or logic zero respectively. It is important therefore to terminate the RS-485 bus or the RS-422 input bus using 120Ω if a pre-bias is present on the RS-485 or RS-422 bus.

A large number of third party equipment manufacturers apply a pre-bias on their RS-485 bus. This pre-bias is applied by pulling one arm of the RS-485 bus high (+5 volts) and the other arm low (0 volts) using high value resistors within the third party equipment. In order to ensure that the AMG equipment detects a tri-state condition, then these resistors should have a value above 5kΩ. If the third party bias resistors are less than 750Ω the bus can be multiple terminated as required to ensure that a tri-state level is detected.

The system detects a tri-state input condition on the data channel bus when in RS-485 or RS-422 mode.

### Data Interface Connections

Connector Pin No.	Data Channel		
	RS-485 [switch right]	RS-422 [switch mid]	RS-232 [switch left]
1		IN + (A)	IN
2		IN - (B)	
3	GND	GND	GND
4			
5			
6			
7	IN/OUT + (A)	OUT + (A)	
8	IN/OUT - (B)	OUT - (B)	OUT

Note: (A) or (B) in brackets in the above table refers to RS-485 / RS-422 data specification.

### **Alarm Channel Configuration**

The **AMG5613** also provides one bi-directional alarm output / contact closure input.

An alarm input is typically connected to a contact closure switch. The ALARM IN+ input incorporates a 330R pull-up resistor to the internal +3V3 supply.

The alarm output provides a pair of normally open, volt-free contacts from a solid state relay, maximum current rating 150mA at 125Vac/dc, Ron < 6.5Ω.

### **Bi-directional Alarm Interface Connections**

Connector Pin No.	Alarm Interface	
	Alarm IN	Alarm OUT
1		
2		
3	GND	
4	ALARM IN +	
5		ALARM OUT -
6		ALARM OUT +
7		
8		

## **Physical Information**

---

### **Dimensions**

Height.....56mm  
Width.....55mm (excluding connectors)  
Depth .....25mm  
Weight.....200grams

### **Mounting Details**

The unit is designed to be mounted using the clip holder supplied, which can be fixed to a wall or panel using 2 off 4mm screws.

## **Safety**

---

AMG Optical Fibre Products use Class 1 laser systems in accordance with EN 60825-2:2000.

It is always advisable to follow good practice when working with optical fibre systems. This includes:

- Do not stare with unprotected eyes or with any unapproved collimating device at fibre ends or connector faces, or point them at other people.
- Use only approved filtered or attenuating viewing aids

For other safety issues and advice on good practice associated with optical fibre systems, please see EN 60825-2:2000 or your local safety officer.

## **Maintenance and Repair**

---

There are no user serviceable parts within AMG products. See unit data sheet for full specification.

In case of problem or failure, please call your local support centre or contact: **AMG Systems Ltd.** at 3 The Omega Centre, Stratton Business Park, Biggleswade, Beds., SG18 8QB, UK.

Phone	+44 (0) 1767 600 777
Technical Support	+44 (0) 1767 604 491
Email	techsupport@amgsystems.com