


AMG5616A6R Instruction Manual

Single Channel Video Receive Unit with one Bi-directional Data Channel, two Uni-directional Alarms and one Echelon FTT-10A Data Channel for a Multimode Fibre Link

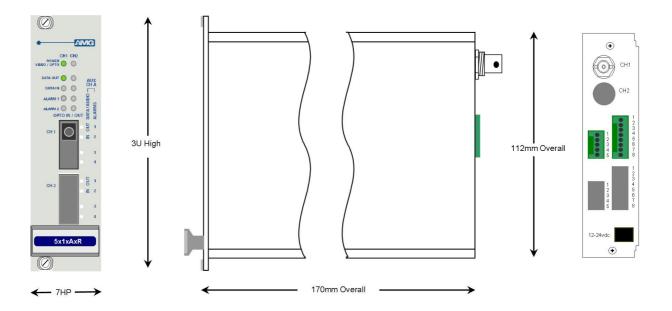

The **AMG5616A6R** is a rackmount one channel video receive unit designed to receive 1 video signal and 2 Uni-directional alarms, and transmit & receive 1 serial data signal plus 1 Echelon FTT-10A data signal over a single Multimode optical fibre.

The **AMG5616A6R** is designed to plug into an **AMG2005** or **AMG2009** subrack, which in turn fits into a 19" rack system.

The AMG5616A6R is designed to operate with an AMG5615A6 / AMG5615A6R single channel or one channel of an AMG5625A6 / AMG5625A6R dual channel video transmit unit in a point to point configuration. The R suffix in the partno. indicates a rackmount configuration.

Contents


Introduction	3
Unit Functional Schematic	
Optical Connection	3
Connections	4
Video Output Connections	
Optical Connections Multimode	4
Power Connection Data and Alarm Channel Connections	4
Front Panel Indicators	5
Power LED	5
Low Speed Data LEDs	
Alailli LEDS	5
Echelon FTT-10A Data Channel Configuration	6
Data Interface Connections	
Echelon FTT-10A Data LEDs	6
Data and Alarm Channel Configuration	7
Data Channel Configuration	
Data Interface Connections	
Alarm Channel Configuration Alarm Interface Connections	
Physical Information	9
Dimensions	
Mounting Details	9
Safety	9
Maintenance and Repair	9

Introduction

Unit Functional Schematic

The **AMG5616A6R** receives 1 video signal, 1 serial data signal, 2 uni-directional alarm signals plus 1 Echelon FTT-10A data signal from the **AMG5615A6** transmit unit.

It also transmits 1 serial data signal and 1 Echelon FTT-10A data signal to the **AMG5615A6**.

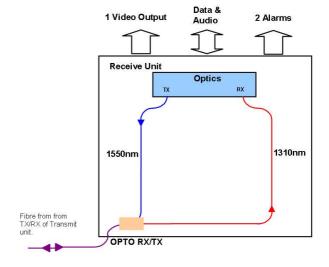

Optical Connection

The AMG5616A6R connections are illustrated in the following example which shows an AMG5615A6 transmit unit together with an AMG5616A6R rackmount receive unit configured as a single channel point to point system.



Connections

Video Output Connections

Optical Connections Multimode

No. of Optical Connections	Multimode 50/125 or 62.5/125*
Minimum Optical Launch Power Transmit Wavelength	
Minimum Optical SensitivityReceive Wavelength	
Minimum Ontical Dunamia Dange	204D

Minimum Optical Dynamic Range20dB.

Power Connection

Power supply	From plug in connection on the AMG2009 or AMG2015 subrack
Power consumption	1.5 Watts max.

Data and Alarm Channel Connections

No. of Data Channels No. of Data Channels No. of Alarms	
Connectors Connector Partnos	Removable 5-pin, 8-pin, 2.5mm, Spring Terminal Phoenix 1881354, 1881383
Data Interfaces	RS-232, RS-422 or R-S485. Selected by slide switch inside enclosure. *See appropriate section on how to remove the case for access to the data switches

RS-485 – Switch Position - Top RS-422 – Switch Position - Middle RS-232 – Switch Position - Bottom

Alarm Outputs......Solid-state Relay, maximum 150mA at 125Vac/dc, Ron < 6.5Ω

^{**}Note: the transmission distance is limited by the bandwidth of the Multimode optical fibre. The optical data rate is 155Mbits/s, which may restrict operation to a maximum fibre length of 7km, although in most cases the units will operate successfully over longer fibre lengths. It is advisable however for distances greater than 7km, to have the optical fibre tested.

Front Panel Indicators

Power LED

Power / Video / OptoGreen - Video present & opto sync.

R/G - Opto sync. but no video present.

Red - No opto sync.

Off - No power applied to unit.

Low Speed Data LEDs

Data Present IN (RS485 or RS422) Green - logic zero (+V, -V) present on IN+, IN-Red - logic one (-V,V+) present on IN+, IN-

Off - tri-state off or no connection on IN+, IN-

Data Present IN (RS232) Green - logic zero (+V) present on input IN+

Red - logic transitions present on input IN+
Off - logic one (-V) present on input IN+

IN corresponds to the data signals being transmitted onto the optical fibre.

Data Present OUT (RS485 or RS422) Green - logic zero (+V,-V) present on OUT+, OUT-

Red - logic one (-V,+V) present on OUT+, OUT-

Off - tri-state off or no connection on OUT+, OUT-

Data Present OUT (RS232) Green - logic zero (+V) present on OUT+

Red - logic transitions present on OUT+
Off - logic one (-V) present on OUT+

OUT corresponds to the data signals being received from the optical fibre.

Alarm LEDs

Channel 1

ALARM 2 OUT......Green - Alarm ON / Contacts closed.
Off - Alarm OFF / Contacts open.

Channel 2

ALARM 2 OUT......Green - Alarm ON / Contacts closed.

Off - Alarm OFF / Contacts open.

Echelon FTT-10A Data Channel Configuration

The **AMG5615A6** transmit unit sends and receives Echelon FTT-10A data to/from an **AMG5616A6** or rackmount equivalent **AMG5616A6R** receive unit.

The auxiliary data channel is provided by an X04057 RS-422/RS-485 Daughter Board. It is used when an additional RS-422 or RS-485 data interface is required and provides one bi-directional RS-422 or RS-485 data channel.

Data Interface Connections

Connecter Pin No.	Echelon FTT-10A Data Channel
1	Channel 1 NET_B
2	Channel 1 NET_A
3	GND
4	-
5	-

Echelon FTT-10A Data LEDs

Data type depends on AMG system: RS-232, RS-422, RS-485, 20mA,TTL, or FTT-10A

Data Present INGreen - Data channel present but not transmitting

R/G - Data channel transmitting

Off - Data channel not present or no connection

IN corresponds to the data signals being transmitted onto the optical fibre.

Data Present OUTGreen - Data channel present but not transmitting

R/G - Data channel receiving


Off - Data channel not present or no connection

OUT corresponds to the data signals being received from the optical fibre.

Data and Alarm Channel Configuration

The **AMG5616A6R** sends and receives data to/from one **AMG5615A6** or **AMG5615A6R** rackmount equivalent single channel transmit unit. The physical data interface RS-485, RS-422 or RS-232 is selectable by the user with the slide switch mounted on the main PCB inside the enclosure.

2 uni-directional alarms are also provided, each of which can receive an on/off signal from an **AMG5615A6** and are typically used to convey contact closure status. Each alarm output uses a Solid-state relay, with a maximum load current of 150mA at 125Vac/dc and Ron < 6.5Ω .

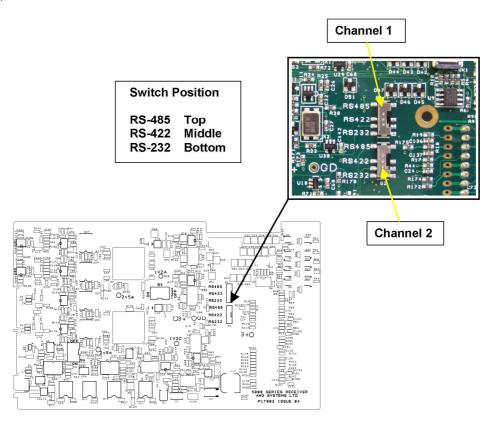

Data Channel Configuration

Each low speed data channel provides an RS-232, RS-422 (full duplex, four wire) or RS-485 (half duplex, two wire) interface defined by the corresponding mode switch inside the enclosure. Every data channel as shipped from the factory is set up for RS-485 operation unless otherwise requested.

The data input for both the RS-485 and the RS-422 modes detects a tri-state input condition by monitoring the differential voltage level across the input. A differential level below 600mV positive or negative will be detected as a tri-state condition. A level above 600mV positive or negative will be detected as a logic 1 or logic 0 respectively. It is important therefore to terminate the RS-485 bus or the RS-422 input bus using 120Ω if a pre-bias is present on the RS-485 or RS-422 bus.

A large number of third party equipment manufacturers apply a pre-bias on their RS-485 bus. This pre-bias is applied by pulling one arm of the RS-485 bus high (+5 volts) and the other arm low (0 volts) using high value resistors within the third party equipment. In order to ensure that the AMG equipment detects a tri-state condition, then these resistors should have a value above $5k\Omega$. If the third party bias resistors are less the 750Ω the bus can be multiple terminated as required to ensure that a tri-state level is detected.

The system detects a tri-state input condition on the data channel bus when in RS-485 or RS-422 mode.

Data Interface Connections

Connector	Data Channel		
Pin No.	RS-485 [switch top]	RS-422 [switch middle]	RS-232 [switch bottom]
1		IN + (A)	IN
2		IN - (B)	
3	GND	GND	GND
4			
5			
6			
7	IN/OUT + (A)	OUT + (A)	
8	IN/OUT - (B)	OUT - (B)	OUT

Note: (A) or (B) in brackets in the above table refers to RS-485 / RS-422 data specification.

Alarm Channel Configuration

The AMG5616A6R provides 2 uni-directional alarm outputs.

Each alarm output provides a set of contacts from a solid state relay.

Alarm Output 1: Provides a pair of normally open, volt-free contacts from a solid-state relay. **Alarm Output 2**: Provides a normally open, switched contact to 0V/GND from a solid-state relay.

Alarm Interface Connections

Connector Pin	Alarm Interface		
No.	Alarm 1	Alarm 2	
1			
2			
3		ALARM 2 GND	
4		ALARM 2 OUT +	
5	ALARM 1 OUT -		
6	ALARM 1 OUT +		
7			
8			

Physical Information

Dimensions

Height	.3U Plug-in
Width	•
Depth	. 170mm excluding connectors
Weight	

Mounting Details

The unit is designed to be mounted within an AMG2009 or AMG2015 Subrack on standard card guides.

Safety

AMG Optical Fibre Products use Class 1 laser systems in accordance with EN 60825-2:2000.

It is always advisable to follow good practice when working with optical fibre systems. This includes:

- Do not stare with unprotected eyes or with any unapproved collimating device at fibre ends or connector faces, or point them at other people.
- Use only approved filtered or attenuating viewing aids

For other safety issues and advice on good practice associated with optical fibre systems, please see EN 60825-2:2000 or your local safety officer.

Maintenance and Repair

There are no user serviceable parts within AMG products. See unit data sheet for full specification.

In case of problem or failure, please call your local support centre or contact: **AMG Systems Ltd.** at 3 The Omega Centre, Stratton Business Park, Biggleswade, Beds., SG18 8QB, UK.

Phone +44 (0) 1767 600 777 Technical Support +44 (0) 1767 604 491

Email techsupport@amgsystems.com

