


# AMG5904-2A9R Instruction Manual

# Receive Unit with two Bi-directional Data Channels, two Bidirectional Audio Channels, eight Bi-directional Alarms plus Ethernet for a Singlemode Fibre Link

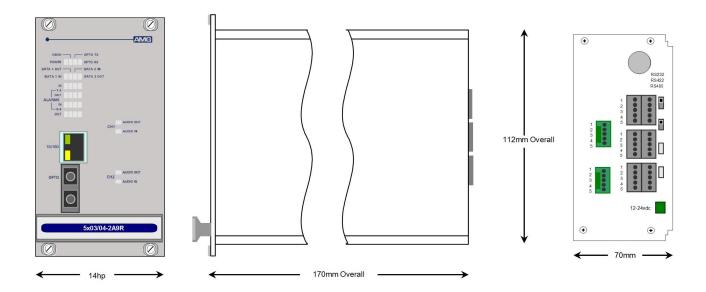

The **AMG5904-2A9R** is a rackmount data/audio receive unit designed to transmit and receive 2 data signals, 2 audio channels plus 8 bi-directional alarms and also provides full duplex 100Base-T Ethernet connectivity over a Singlemode optical fibre.

The **AMG5904-2A9R** is designed to plug into an **AMG2009** or **AMG2015** subrack, which in turn fits into a 19" rack system.

The AMG5904-2A9R is designed to operate with an AMG5903-2A9 or AMG5903-2A9R data transmit unit in a point to point configuration. The R suffix in the partno. indicates a rackmount configuration.

# **Contents**


Introduction	3
Unit Functional Schematic	3
Optical Connection	
Ethernet Operation	
Connections	4
Power Connection	4
Optical Connection Singlemode	4
Data and Alarm Channel Connections	4
Audio Connections	4
Ethernet Connection	5
Front Panel Indicators	6
Power LED	
Low Speed Data LEDs	
Alarm LEDs	
Ethernet Data LEDs	6
Audio LEDs	
Data and Alarm Channel Configuration	8
Data Channel Configuration	8
Data Interface Connections	
Data Channel Termination	8
Alarm Channel Configuration	
Alarm Channel Circuit	
Alarm Interface Connections	10
Audio Channel Configuration	11
Audio Channel Configuration	
Audio Interface Connections Ch1 & Ch2	11
Physical Information	12
Dimensions	12
Mounting Details	
Safety	12
Maintenance and Repair	12

# Introduction

#### Unit Functional Schematic


The AMG5904-2A9R transmits and receives 2 data channels, 2 bi-directional audio signals and 8 bi-directional alarm signals to/from the AMG5903-2A9 transmit unit.

Ethernet connectivity is also provided between the two units.

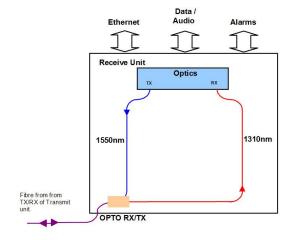

## **Optical Connection**

The AMG5904-2A9R connections are illustrated in the following example which shows an AMG5903-2A9 data transmit unit together with an AMG5904-2A9R rackmount data receive unit configured as a point to point system.

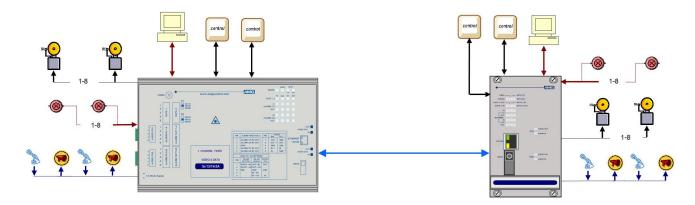

# **Ethernet Operation**

The Ethernet interface supports 100Mbit/s full duplex operation only. Data is transmitted from one port the other port with minimum delay or buffering.

The port implements "Auto MDI/MDIX" i.e. it may be connected with either a straight-though or crossover cable to an appropriate device such as external switch, PC or other DCE/DTE.

Two LED indicators are provided adjacent to the RJ-45 port: Green indicates Link / Data transfer and Yellow indicates no Ethernet connection.

### **Connections**

_	_	4 -
Power	$(`\cap nn)$	つんけつい
I OWEI	CUIIII	<b>5</b> 641011

Power supply ......From plug in connection on the AMG2009 or AMG2015 subrack Power consumption ......5 Watts max.

### **Optical Connection Singlemode**

Optical Fibre	
Primary Optical Launch Power Transmit Wavelength	
Primary Optical SensitivityReceive Wavelength	

Minimum Optical Dynamic Range ......20dB.

#### Data and Alarm Channel Connections

No. of Data Channels	.2
No. of Alarms	.8

Connectors ......Removable 5-pin, 3.5mm, Spring Terminal Connector Partnos......Phoenix 1952296

Data Interfaces ......RS-232 / 422 / 485. Selected by external slide switches D1-D2

RS-232 – Switch Position - Top RS-422 – Switch Position - Middle RS-485 – Switch Position - Bottom

Internal  $120\Omega$  termination resistors may be applied to RS-422 or RS-485 inputs as required by internal DIL switches inside the enclosure. \*See appropriate section on how to remove the case for access to the DIL switches.

# **Audio Connections**

No. of Audio Channels.....2

Input level ......0dBm
Input overload level .....+6dBm

Output impedance ......600 $\Omega$ 

Frequency response ......10Hz to 20KHz

Audio Input impedance is selected by removable jumper JP1 or JP2 on Audio Expansion board inside enclosure. \*See appropriate section on how to remove the case for access to the data/audio switches. 1-2 – High Impedance  $10k\Omega$ 

- 2-3 Balanced  $600\Omega$

# **Ethernet Connection**

Ethernet Data Connector	RJ45
Interface	Auto MDI/MDIX 100BASE-TX
Ethernet Data Rate	Maximum 100Mb/s full duplex

## Front Panel Indicators

Power I	LED
---------	-----

POWER .......Green - Power is present
Off - Power is not present

VIDEO ......Off - Not used

OPTO TX ......Green - Tx opto. present

Off - Tx opto. is not present

OPTO RX......Green - Rx opto. sync.

Off - Rx opto. is not sync.

## Low Speed Data LEDs

Data Present IN (RS485 or RS422) ....Green - logic zero (+V, -V) present on IN+, IN-

Red - logic one (-V,V+) present on IN+, IN-Off - tri-state off or no connection on IN+, IN-

Data Present IN (RS232)......Green - logic zero (+V) present on input IN+

Red - logic transitions present on input IN+
Off - logic one (-V) present on input IN+

IN corresponds to the data signals being transmitted onto the optical fibre.

Data Present OUT (RS485 or RS422) Green - logic zero (+V,-V) present on OUT+, OUT-

Red - logic one (-V,+V) present on OUT+, OUTOff - tri-state off or no connection on OUT+, OUT-

Data Present OUT (RS232)......Green - logic zero (+V) present on OUT+

Red - logic transitions present on OUT+
Off - logic one (-V) present on OUT+

OUT corresponds to the data signals being received from the optical fibre.

#### Alarm LEDs

Channels 1-8

ALARM OUT ......Green - Alarm ON / Contacts closed.

Off - Alarm OFF / Contacts open.

#### Ethernet Data LEDs

Link not Present ......Yellow - Link not present

Off - Link is present

Link Integrity ......Green - Link integrity is good, Idle state

GBlink - Data transfer
Off - Link not present

## Audio LEDs

Audio Present TX ...... Green - audio present > -40dBm

Red - audio present > 0dBm (overload at +6dBm)

Off - audio not present or < -40dBm

This represents the audio signals being transmitted on the optical fibre

Audio Present RX...... Green - audio present > -40dBm

Red - audio present > 0dBm (overload at +6dBm)

Off - audio not present or < -40dBm

This represents the audio signals being received from the optical fibre.

# Data and Alarm Channel Configuration

The **AMG5904-2A9R** receive unit sends and receives data to/from an **AMG5903-2A9** or rackmount equivalent **AMG5903-2A9R** transmit unit. The 2 physical data interfaces RS-485, RS-422 or RS-232 are individually selectable by the user with the slide switch mounted from the rear panel.

There are also 8 bi-directional alarm inputs provided, each alarm input is typically connected to a contact closure switch. Each alarm output can receive an on/off signal from an **AMG5903-2A9** and is typically used to convey contact closure status.

# **Data Channel Configuration**

Each low speed data channel provides an RS-232, RS-422 (full duplex, four wire) or RS-485 (half duplex, two wire) interface defined by the corresponding mode switch inside the enclosure. Every data channel as shipped from the factory is set up for RS-485 operation unless otherwise requested.

The data input for both the RS-485 and the RS-422 modes detects a tri-state input condition by monitoring the differential voltage level across the input. A differential level below 600mV positive or negative will be detected as a tri-state condition. A level above 600mV positive or negative will be detected as a logic 1 or logic 0 respectively. It is important therefore to terminate the RS-485 bus or the RS-422 input bus using  $120\Omega$  if a pre-bias is present on the RS-485 or RS-422 bus.

A large number of third party equipment manufacturers apply a pre-bias on their RS-485 bus. This pre-bias is applied by pulling one arm of the RS-485 bus high (+5 volts) and the other arm low (0 volts) using high value resistors within the third party equipment. In order to ensure that the AMG equipment detects a tri-state condition, then these resistors should have a value above  $5k\Omega$ . If the third party bias resistors are less the  $750\Omega$  the bus can be multiple terminated as required to ensure that a tri-state level is detected.

The system detects a tri-state input condition on the data channel bus when in RS-485 or RS-422 mode.

### **Data Interface Connections**

Commonton	Data Channel		
Connector Pin No.	RS-485 [switch bottom]	RS-422 [switch middle]	RS-232 [switch top]
1	IN/OUT - (B)	OUT - (B)	OUT
2	IN/OUT + (A)	OUT + (A)	
3	GND	GND	GND
4		IN - (B)	
5		IN + (A)	IN

Note: (A) or (B) in brackets in the above table refers to RS-485 / RS-422 data specification.


#### **Data Channel Termination**

The interface mode RS-232, RS-422 or RS-485 of each data port Data 1-4, is selected with the corresponding external slide switch D1-D4. The actual number of data channels provided on the unit depends upon the AMG model.

Internal  $120\Omega$  termination resistors across IN+ and IN- inputs may also be applied when in RS-422 or RS-485 mode using internal DIP switches P0-P3 on the main PCB inside the enclosure. P0-P3 may

be accessed by removing the 2 fixing screws in the rear panel and sliding the PCB out of the enclosure.

For clarity, in the 3 examples shown below all 4 data ports D1-D4 are terminated the same, but each data channel may be configured & terminated independently as required. The 3 examples shown are RS-232 (no termination), RS-422 ( $120\Omega$ ) or RS-485 ( $120\Omega$ ).

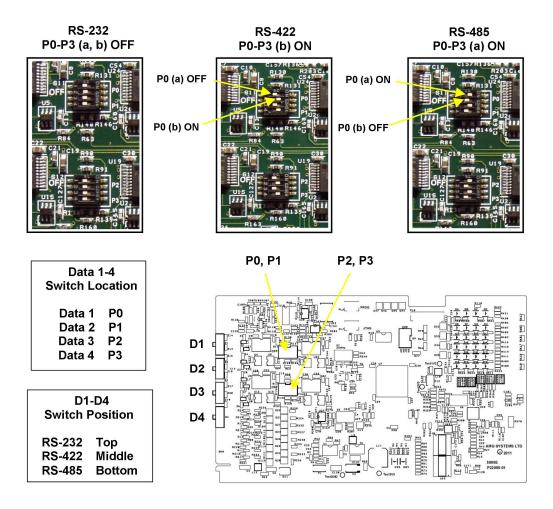

### **Alarm Channel Configuration**


The AMG5904-2A9R provides 8 bi-directional contact closure inputs / alarm outputs.

Each ALARM IN input is via an internal  $10k\Omega$  series resistor with a  $47k\Omega$  pull-up resistor to the internal +3V3 supply.

Each ALARM OUT output can receive an on/off signal from an **AMG5903-2A9** and is typically used to convey contact closure status. Each alarm output is NPN open collector, maximum load 500mA / 24Vdc.

#### **Alarm Channel Circuit**

The output of each alarm channel is an NPN open collector transistor circuit, with an absolute maximum rating of 1A / 60V. There is a common GND for all alarm channels.

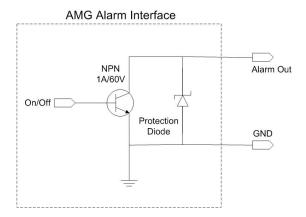

The alarm output circuit is designed for low dc voltage / low current operation and has minimal internal protection. If an alarm output is used to drive an external relay circuit, the external crcuit MUST include a protection (flyback) diode connected across the relay to prevent the high voltage generated from a back EMF causing damage due to the AMG output transistor.

### **Alarm Interface Connections**

Connector Pin	Alarm Interfaces	
No.	Alarm IN 1-4, 5-8	Alarm OUT 1-4 , 5-8
1	ALARM 1/5 IN	ALARM 1/5 OUT
2	ALARM 2/6 IN	ALARM 2/6 OUT
3	GND	GND
4	ALARM 3/7 IN	ALARM 3/7 OUT
5	ALARM 4/8 IN	ALARM 4/8 OUT

# **Audio Channel Configuration**

# **Audio Channel Configuration**

The AMG5904-2A9R provides two bi-directional audio channels.

Each audio channel input can be configured as a single-ended high impedance  $10k\Omega$  input with GND reference or alternativly as a balanced  $600\Omega$  input pair. The input impedance is selected using jumpers on the audio expansion board JP1 (Channel 1) or JP2 (Channel 2), the default setting is balanced  $600\Omega$ .

JP1/JP2 1-2 – High Impedance 10kΩ

JP1/JP2 2-3 – Balanced  $600\Omega$ 

### Audio Interface Connections Ch1 & Ch2

Connector Pin No.	Balanced Input 600Ω	High Z input 10kΩ
1	OUT -	OUT -
2	OUT +	OUT +
3	GND	GND
4	IN +	IN
5	IN -	GND

# **Physical Information**

#### **Dimensions**

Height	3U Plug-in
Width	
D II-	470

Depth ......170mm excluding connectors

Weight......750grams

## **Mounting Details**

The unit is designed to be mounted within an AMG2009 or AMG2015 Subrack on standard card guides.

# Safety

AMG Optical Fibre Products use Class 1 laser systems in accordance with EN 60825-2:2000.

It is always advisable to follow good practice when working with optical fibre systems. This includes:

- Do not stare with unprotected eyes or with any unapproved collimating device at fibre ends or connector faces, or point them at other people.
- Use only approved filtered or attenuating viewing aids

For other safety issues and advice on good practice associated with optical fibre systems, please see EN 60825-2:2000 or your local safety officer.

# Maintenance and Repair

There are no user serviceable parts within AMG products. See unit data sheet for full specification. In case of problem or failure, please call your local support centre or contact: **AMG Systems Ltd.** at 3 The Omega Centre, Stratton Business Park, Biggleswade, Beds., SG18 8QB, UK.

Phone +44 (0) 1767 600 777 Technical Support +44 (0) 1767 604 491

Email techsupport@amgsystems.com