


AMG5904A9B9G Instruction Manual

Data Receive Unit with 2 Bi-directional Data Channels, 16 Bi-directional Audio Channels and 8 Bi-directional Alarms plus Ethernet for a Singlemode Fibre Link

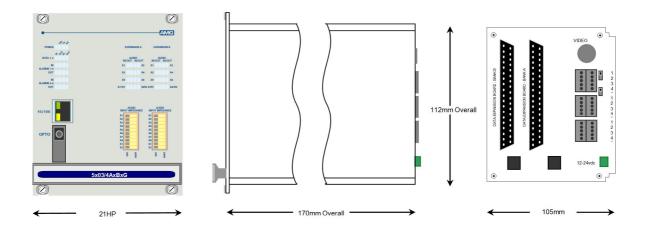

The **AMG5904A9B9G** is a rackmount data receive unit designed to transmit and receive 2 data channels, 16 audio channels and 8 bi-directional alarms over one Singlemode optical fibre. It also provides full duplex 100BASE-TX Ethernet connectivity.

The **AMG5904A9B9G** is designed to be powered using an **AMG2003** standalone or equivalent power supply. The G suffix in the partno. indicates a 3rd party subrack mounting configuration.

The **AMG5904A9B9G** is designed to operate with an **AMG5903A9B9** standalone or **AMG5903A9B9** rackmount data transmit unit in a point to point configuration.

Contents


Introduction	3
Unit Functional SchematicOptical Connection	
Connections	4
Optical Connection Singlemode	4
Power Connection	4
Data and Alarm Channel Connections	
Audio Connections	
Ethernet Connection	4
Front Panel Indicators	5
Power LED	5
Low Speed Data LEDs	5
Audio LEDs	
Alarm LEDs	
Ethernet Data LEDs	6
Ethernet Operation	6
Data and Alarm Channel Configuration	7
Data Channel Configuration	7
Data Interface Connections	
Data Channel Termination	
Alarm Channel Configuration	
Alarm Channel Circuit	
Alarm Interface Connections	
Audio Channel Configuration Data and Audio Connections	
Data and Addio Connections	10
Physical Information	11
Dimensions	11
Mounting Details	
Safety	11
Maintenance and Repair	11

Introduction

Unit Functional Schematic


The **AMG5904A9B9G** transmits and receives 2 data channels, 16 bi-directional audio signals and 8 bi-directional alarm signals to/from the **AMG5903A9B9** transmit unit.

Ethernet connectivity is also provided between the two units.

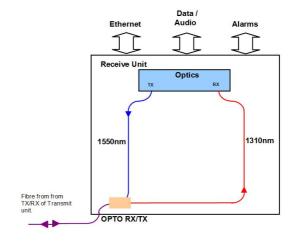

Optical Connection

The **AMG5904A9B9G** connections are illustrated in the following example which shows an **AMG5903A9B9** data transmit unit together with an **AMG5904A9B9G** rackmount data receive unit configured as a point to point system.

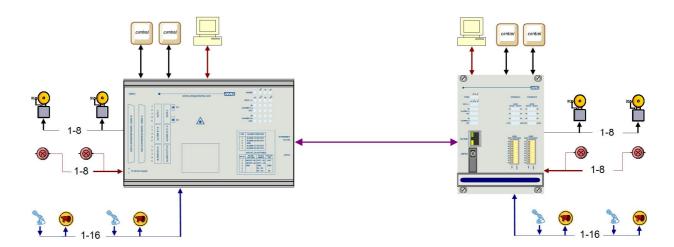

Connections

Optical Connection Singlemode	•		
Optical Fibre	y		
Connector	SC/PC		
Primary Optical Launch Power Transmit Wavelength			
Primary Optical SensitivityReceive Wavelength			
Minimum Optical Dynamic Range	20dB.		
Power Connection			
	Removable 2-pin, 3.81mm, Screw Terminal		
Connector Partno			
Supply Voltage Maximum Power			
Data and Alarm Channel Conne			
No. of Data Channels			
No. of Alarms			
Connectors	Removable 5-pin, 3.5mm, Spring Terminal		
Connector Partnos			
Data InterfacesRS-232 / 422 / 485. Selected by external slide switches D1-D2 RS-232 – Switch Position - Top RS-422 – Switch Position - Middle RS-485 – Switch Position - Bottom			
	ray be applied to RS-422 or RS-485 inputs as required by internal see appropriate section on how to remove the case for access to		
	Input is via a series 10k resister with 47k Ω pull-up to +3V3Output is NPN open collector, maximum load 500mA @ 24Vdc.		
Audio Connections			
Audio Channels – BANK A Audio Channels – BANK B			
	37-way D-Type female connector - shieldedSee appropriate section for connections and configuration		
Audio Specifications			
Input level			
Input overload level	+6dBm 56kΩ / 600Ω. Each channel individually selected using DIL		
	switch on front panel		
Output impedanceFrequency response			
Ethernet Connection			
Ethernet Data Connector	R 145		
Interface			
	Auto MDI/MDIX 100BASE-TX		

Front Panel Indicators

P	ower	L	ED

POWER......Green - Power is present
Off - Power is not present

VIDEOOff - Not used

OPTO TX......Green - Tx opto. present

Off - Tx opto. is not present

OPTO RX Green - Rx opto. sync.

Off - Rx opto. is not sync.

Low Speed Data LEDs

Data Present IN (RS485 or RS422) Green - logic zero (+V, -V) present on IN+, IN-Red - logic one (-V,V+) present on IN+, IN-

Off - tri-state off or no connection on IN+, IN-

Data Present IN (RS232) Green - logic zero (+V) present on input IN+

Red - logic transitions present on input IN+
Off - logic one (-V) present on input IN+

IN corresponds to the data signals being transmitted onto the optical fibre.

Data Present OUT (RS485 or RS422) Green - logic zero (+V,-V) present on OUT+, OUT-

Red - logic one (-V,+V) present on OUT+, OUTOff - tri-state off or no connection on OUT+, OUT-

Data Present OUT (RS232) Green - logic zero (+V) present on OUT+

Red - logic transitions present on OUT+
Off - logic one (-V) present on OUT+

OUT corresponds to the data signals being received from the optical fibre.

Audio LEDs

Channels 1-16

Audio Present TX Green - audio present > -40dBm

Red - audio present > 0dBm (overload at +6dBm)

Off - audio not present or < -40dBm

This represents the audio signals being transmitted on the optical fibre

Audio Present RX......Green - audio present > -40dBm

Red - audio present > 0dBm (overload at +6dBm)

Off - audio not present or < -40dBm

This represents the audio signals being received from the optical fibre.

Alarm LEDs

Channels 1-8

ALARM OUTGreen - Alarm ON / Contacts closed.

Off - Alarm OFF / Contacts open.

Ethernet Data LEDs

Link IntegrityGreen - Link integrity is good, Idle state

GBlink - Data transfer
Off - Link not present

Ethernet Operation

The Ethernet interface supports 100Mbit/s full duplex operation only. Data is transmitted from one port the other port with minimum delay or buffering.

The port implements "Auto MDI/MDIX" i.e. it may be connected with either a straight-though or crossover cable to an appropriate device such as external switch, PC or other DCE/DTE.

Two LED indicators are provided adjacent to the RJ-45 port: Green indicates Link / Data transfer and Yellow indicates no Ethernet connection.

Data and Alarm Channel Configuration

The **AMG5904A9B9G** receive unit sends and receives data to/from an **AMG5903A9B9** or rackmount equivalent **AMG5903A9B9** transmit unit. The 2 physical data interfaces RS-485, RS-422 or RS-232 are individually selectable by the user with the slide switch mounted from the rear panel.

There are also 8 bi-directional alarm inputs provided, each alarm input is typically connected to a contact closure switch. Each alarm output can receive an on/off signal from an **AMG5903A9B9** and is typically used to convey contact closure status.

Data Channel Configuration

Each low speed data channel provides an RS-232, RS-422 (full duplex, four wire) or RS-485 (half duplex, two wire) interface defined by the corresponding mode switch inside the enclosure. Every data channel as shipped from the factory is set up for RS-485 operation unless otherwise requested.

The data input for both the RS-485 and the RS-422 modes detects a tri-state input condition by monitoring the differential voltage level across the input. A differential level below 600mV positive or negative will be detected as a tri-state condition. A level above 600mV positive or negative will be detected as a logic 1 or logic 0 respectively. It is important therefore to terminate the RS-485 bus or the RS-422 input bus using 120Ω if a pre-bias is present on the RS-485 or RS-422 bus.

A large number of third party equipment manufacturers apply a pre-bias on their RS-485 bus. This pre-bias is applied by pulling one arm of the RS-485 bus high (+5 volts) and the other arm low (0 volts) using high value resistors within the third party equipment. In order to ensure that the AMG equipment detects a tri-state condition, then these resistors should have a value above $5k\Omega$. If the third party bias resistors are less the 750Ω the bus can be multiple terminated as required to ensure that a tri-state level is detected.

The system detects a tri-state input condition on the data channel bus when in RS-485 or RS-422 mode.

Data Interface Connections

Connector Pin No.	Data Channel		
	RS-485 [switch bottom]	RS-422 [switch middle]	RS-232 [switch top]
1	IN/OUT - (B)	OUT - (B)	OUT
2	IN/OUT + (A)	OUT + (A)	
3	GND	GND	GND
4		IN - (B)	
5		IN + (A)	IN

Note: (A) or (B) in brackets in the above table refers to RS-485 / RS-422 data specification.


Data Channel Termination

The interface mode RS-232, RS-422 or RS-485 of each data port Data 1-4, is selected with the corresponding external slide switch D1-D4. The actual number of data channels provided on the unit depends upon the AMG model.

Internal 120Ω termination resistors across IN+ and IN- inputs may also be applied when in RS-422 or RS-485 mode using internal DIP switches P0-P3 on the main PCB inside the enclosure. P0-P3 may

be accessed by removing the 2 fixing screws in the rear panel and sliding the PCB out of the enclosure.

For clarity, in the 3 examples shown below all 4 data ports D1-D4 are terminated the same, but each data channel may be configured & terminated independently as required. The 3 examples shown are RS-232 (no termination), RS-422 (120Ω) or RS-485 (120Ω).

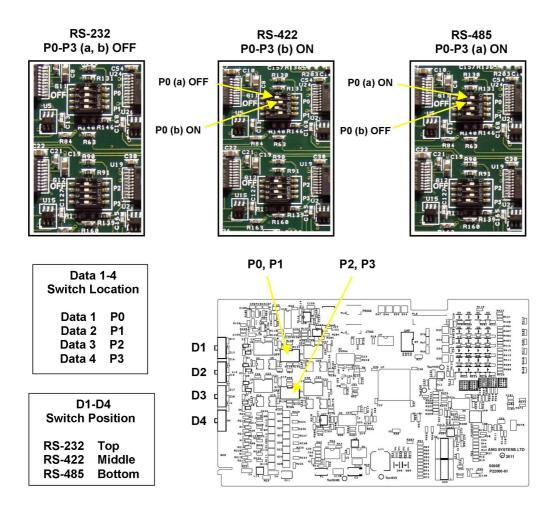


Alarm Channel Configuration

The **AMG5904A9B9G** provides 8 bi-directional contact closure inputs / alarm outputs. Each ALARM IN input is via an internal $10k\Omega$ series resistor with a $47k\Omega$ pull-up resistor to the internal +3V3 supply.

Each ALARM OUT output can receive an on/off signal from an **AMG5903A9B9** and is typically used to convey contact closure status. Each alarm output is NPN open collector, maximum load 50mA / 24Vdc.

Alarm Channel Circuit

The output of each alarm channel is an NPN open collector transistor circuit, with an absolute maximum rating of 1A / 60V. There is a common GND for all alarm channels.

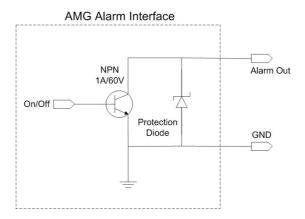

The alarm output circuit is designed for low dc voltage / low current operation and has minimal internal protection. If an alarm output is used to drive an external relay circuit, the external crcuit MUST include a protection (flyback) diode connected across the relay to prevent the high voltage generated from a back EMF causing damage due to the AMG output transistor.

Alarm Interface Connections

	Alarm Interfaces		
Connector Pin No.			
NO.	Alarm IN 1-4, 5-8	Alarm OUT 1-4 , 5-8	
1	ALARM 1/5 IN	ALARM 1/5 OUT	
2	ALARM 2/6 IN	ALARM 2/6 OUT	
3	GND	GND	
4	ALARM 3/7 IN	ALARM 3/7 OUT	
5	ALARM 4/8 IN	ALARM 4/8 OUT	

Audio Channel Configuration

The AMG5904A9B9G provides sixteen bi-directional audio channels.


Each audio channel input is a balanced pair and the impedance can be configured as $56k\Omega$ or 600Ω . The input impedance of each audio channel is individually selected using the DIL switch on the front panel.

If an audio input is single ended or ground referenced input rather than a differential (balanced) input pair, the Audio IN- signal should be connected to one of the GND pins available on the 37way D-type connector. These GND inputs are common to all audio channels.

Data and Audio Connections

The Bank A / Bank B audio channels pin connections on the rear panel connectors are as follows:

Pin	Description	Bank
No.		
1	Audio CH1 IN +	A/B
2	Audio CH1 IN -	A/B
3	Audio CH2 IN +	A/B
4	Audio CH2 IN -	A/B
5	Audio CH3 IN +	A/B
6	Audio CH3 IN -	A/B
7	Audio CH4 IN +	A/B
8	Audio CH4 IN -	A/B
9	GND	A/B
10	GND	A/B
11	GND	A/B
12	Audio CH5 IN +	A/B
13	Audio CH5 IN -	A/B
14	Audio CH6 IN +	A/B
15	Audio CH6 IN -	A/B
16	Audio CH7 IN +	A/B
17	Audio CH7 IN -	A/B
18	Audio CH8 IN +	A/B
19	Audio CH8 IN -	A/B

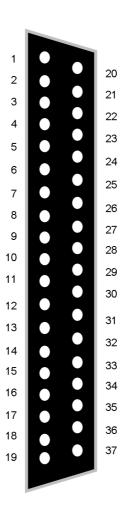

Pin	Description	Bank
No.		
20	Audio CH1 OUT +	A/B
21	Audio CH1 OUT -	A/B
22	Audio CH2 OUT +	A/B
23	Audio CH2 OUT -	A/B
24	Audio CH3 OUT +	A/B
25	Audio CH3 OUT -	A/B
26	Audio CH4 OUT +	A/B
27	Audio CH4 OUT -	A/B
28	GND	A/B
29	GND	A/B
30	Audio CH5 OUT +	A/B
31	Audio CH5 OUT -	A/B
32	Audio CH6 OUT +	A/B
33	Audio CH6 OUT -	A/B
34	Audio CH7 OUT +	A/B
35	Audio CH7 OUT -	A/B
36	Audio CH8 OUT +	A/B
37	Audio CH8 OUT -	A/B

Notes:

Bank A: Channels 1-8 are Audio Bank B: Channels 1-8 are Audio.

Physical Information

Dimensions

Height	.3U Plug-in
Width	.21HP
Depth	. 170mm excluding connectors
Weight	. 1000grams

Mounting Details

The unit is designed to be mounted within a non AMG Subrack on standard card guides.

Safety

AMG Optical Fibre Products use Class 1 laser systems in accordance with EN 60825-2:2000.

It is always advisable to follow good practice when working with optical fibre systems. This includes:

- Do not stare with unprotected eyes or with any unapproved collimating device at fibre ends or connector faces, or point them at other people.
- Use only approved filtered or attenuating viewing aids

For other safety issues and advice on good practice associated with optical fibre systems, please see EN 60825-2:2000 or your local safety officer.

Maintenance and Repair

There are no user serviceable parts within AMG products. See unit data sheet for full specification.

In case of problem or failure, please call your local support centre or contact: **AMG Systems Ltd.** at 3 The Omega Centre, Stratton Business Park, Biggleswade, Beds., SG18 8QB, UK.

Phone +44 (0) 1767 600 777 Technical Support +44 (0) 1767 604 491

Email techsupport@amgsystems.com

