


# AMG5913-2A9 Instruction Manual

# Single Channel Video Transmit Unit with two Bi-directional Data Channels, 2 Bi-directional Audio Channels, eight Bi-directional Alarms plus Ethernet for a Singlemode Fibre Link

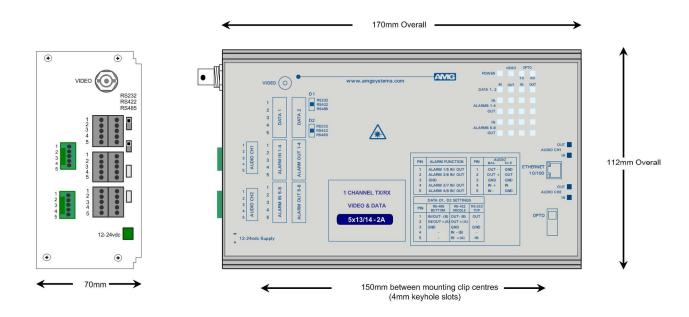

The **AMG5913-2A9** is a standalone one channel video transmit unit designed to transmit 1 video signal and transmit and receive 2 data signals, 2 audio channels plus 8 bi-directional alarms and also provides full duplex 100Base-T Ethernet connectivity over one Singlemode optical fibre.

The AMG5913-2A9 is designed to be powered using an AMG2001 standalone power supply.

The AMG5913-2A9 is designed to operate with an AMG5914-2A9 or AMG5914-2A9R video receive unit in a point to point configuration. The R suffix in the partno. indicates a rackmount configuration.

# **Contents**

Introduction	3
Unit Functional Schematic	
Optical Connection.	
Ethernet Operation	
Litternet Operation	
Connections	4
Power Connection	4
Video Input Connection	
Optical Connection Singlemode	
Data and Alarm Channel Connections	4
Audio Connections	
Ethernet Connection	5
Front Panel Indicators	6
Power LED	
Low Speed Data LEDsAlarm LEDs	
Ethernet Data LEDs	
Audio LEDs	
Data and Alarm Channel Configuration	8
Data Channel Configuration	8
Data Interface Connections	
Data Channel Termination	
Alarm Channel Configuration	
Alarm Interface Connections	
Alaini interiace connections	10
Audio Channel Configuration	11
Audio Channel Configuration	11
Audio Interface Connections Ch1 & Ch2	
Physical Information	12
Dimensions	12
Mounting Details	12
Safety	12
Maintenance and Repair	12


# Introduction

# **Unit Functional Schematic**

The **AMG5913-2A9** transmits 1 video, 2 data channels, 2 bi-directional audio signals and 8 bi-directional alarm signals to the **AMG5914-2A9** receive unit.


It also receives 2 data channels, 2 bidirectional audio signals and 8 bidirectional alarms transmitted from the AMG5914-2A9.

Ethernet connectivity is also provided between the two units.

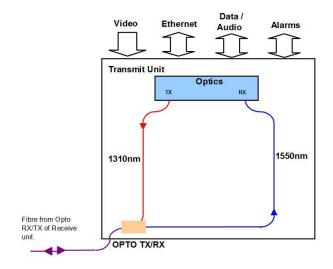

# **Optical Connection**

The AMG5913-2A9 connections are illustrated in the following example which shows an AMG5913-2A9 transmit unit together with an AMG5914-2A9R rackmount receive unit configured as a single channel point to point system.

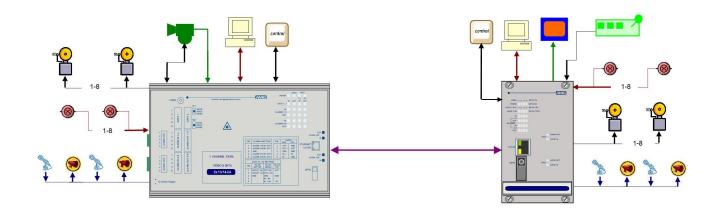

# **Ethernet Operation**

The Ethernet interface supports 100Mbit/s full duplex operation only. Data is transmitted from one port the other port with minimum delay or buffering.

The port implements "Auto MDI/MDIX" i.e. it may be connected with either a straight-though or cross-over cable to an appropriate device such as external switch, PC or other DCE/DTE.

Two LED indicators are provided adjacent to the RJ-45 port: Green indicates Link / Data transfer and Yellow indicates no Ethernet connection.

# **Connections**

_	_	4 -
Power	Conn	ection

Connector Type ...... Removable 2-pin, 3.81mm, Screw Terminal

Maximum Power ...... 5 Watts

# **Video Input Connection**

Connector	75 ohm BNC Socket.
Input Impedance	75 ohm terminated.
Input Level	1 volt p-p nominal
Frequency Response	10Hz to 7MHz.

# **Optical Connection Singlemode**

Optical Fibre	
Primary Optical Launch Power	
Primary Optical Sensitivity	-30dBm

Receive Wavelength ...... 1550nm

Minimum Optical Dynamic Range ...... 20dB.

# **Data and Alarm Channel Connections**

No. of Data Channels	. 2
No. of Alarms	. 8

Connectors ...... Removable 5-pin, 3.5mm, Spring Terminal

RS-232 . Switch Position - Top RS-422 . Switch Position - Middle RS-485 . Switch Position - Bottom

Internal 120 termination resistors may be applied to RS-422 or RS-485 inputs as required by internal DIL switches inside the enclosure. \*See appropriate section on how to remove the case for access to the DIL switches.

### **Audio Connections**

No. of Audio Channels ...... 2

Connectors ...... Removable 5-pin, 2.5mm, Spring Terminal

Connector Partno...... Phoenix 1881354

Input level ...... 0dBm Input overload level .....+6dBm

Input impedance	10k	/ 600	
Output impedance	600		
, ,			
Frequency response	10Hz	to 20K⊢	łz

Audio Input impedance is selected by removable jumper JP1 or JP2 on Audio Expansion board inside enclosure. \*See appropriate section on how to remove the case for access to the data/audio switches.

1-2 . High Impedance 10k

2-3 . Balanced 600

# **Ethernet Connection**

Ethernet Data Connector	RJ45
Interface	Auto MDI/MDIX 100BASE-TX
Ethernet Data Rate	Maximum 100Mb/s full duplex

# Front Panel Indicators

Data Present IN (RS485 or RS422).... Green

Power LED

i ower LLD	
POWERGreen	- Power is present
Off	- Power is not present
VIDEOGreen	- Video input signal is present
Off	<ul> <li>Video input signal is not present</li> </ul>
OPTO TX Green	- Tx opto. present
Off	- Tx opto. is not present
OPTO RX Green	- Rx opto. sync.
Off	- Rx opto. is not sync.
Low Speed Data LEDs	

Red - logic one (-V,V+) present on IN+, INOff - tri-state off or no connection on IN+, INData Present IN (RS232) ...... Green - logic zero (+V) present on input IN+

Red - logic transitions present on input IN+
Off - logic one (-V) present on input IN+

logic zero (+V, -V) present on IN+, IN-

IN corresponds to the data signals being transmitted onto the optical fibre.

Data Present OUT (RS485 or RS422) Green - logic zero (+V,-V) present on OUT+, OUT- logic one (-V,+V) present on OUT+, OUT- tri-state off or no connection on OUT+, OUT-

Data Present OUT (RS232) ...... Green - logic zero (+V) present on OUT+ Red - logic transitions present on OUT+ Off - logic one (-V) present on OUT+

OUT corresponds to the data signals being received from the optical fibre.

### Alarm LEDs

Chanr	nels	1-8
-------	------	-----

# Ethernet Data LEDs

GBlink - Data transfer
Off - Link not present

# Audio LEDs

Audio Present TX...... Green - audio present > -40dBm

Red - audio present > 0dBm (overload at +6dBm)

Off - audio not present or < -40dBm

This represents the audio signals being transmitted on the optical fibre

Audio Present RX ...... Green - audio present > -40dBm

Red - audio present > 0dBm (overload at +6dBm)

Off - audio not present or < -40dBm

This represents the audio signals being received from the optical fibre.

# Data and Alarm Channel Configuration

The **AMG5913-2A9** transmit unit sends and receives data to/from an **AMG5914-2A9** or rackmount equivalent **AMG5914-2A9R** receive unit. The 2 physical data interfaces RS-485, RS-422 or RS-232 are individually selectable by the user with the slide switch mounted from the rear panel.

There are also 8 bi-directional alarm inputs provided, each alarm input is typically connected to a contact closure switch. Each alarm output can receive an on/off signal from an **AMG5914-2A9** and is typically used to convey contact closure status.

# **Data Channel Configuration**

Each low speed data channel provides an RS-232, RS-422 (full duplex, four wire) or RS-485 (half duplex, two wire) interface defined by the corresponding mode switch inside the enclosure. Every data channel as shipped from the factory is set up for RS-485 operation unless otherwise requested.

The data input for both the RS-485 and the RS-422 modes detects a tri-state input condition by monitoring the differential voltage level across the input. A differential level below 600mV positive or negative will be detected as a tri-state condition. A level above 600mV positive or negative will be detected as a logic 1 or logic 0 respectively. It is important therefore to terminate the RS-485 bus or the RS-422 input bus using 120 if a pre-bias is present on the RS-485 or RS-422 bus.

A large number of third party equipment manufacturers apply a pre-bias on their RS-485 bus. This pre-bias is applied by pulling one arm of the RS-485 bus high (+5 volts) and the other arm low (0 volts) using high value resistors within the third party equipment. In order to ensure that the AMG equipment detects a tri-state condition, then these resistors should have a value above 5k . If the third party bias resistors are less the 750 the bus can be multiple terminated as required to ensure that a tri-state level is detected.

The system detects a tri-state input condition on the data channel bus when in RS-485 or RS-422 mode.

### Data Interface Connections

	Data Channel		
Connector Pin No.	RS-485 [switch bottom]	RS-422 [switch middle]	RS-232 [switch top]
1	IN/OUT - (B)	OUT - (B)	OUT
2	IN/OUT + (A)	OUT + (A)	
3	GND	GND	GND
4		IN - (B)	
5		IN + (A)	IN

Note: (A) or (B) in brackets in the above table refers to RS-485 / RS-422 data specification.


### **Data Channel Termination**

The interface mode RS-232, RS-422 or RS-485 of each data port Data 1-4, is selected with the corresponding external slide switch D1-D4. The actual number of data channels provided on the unit depends upon the AMG model.

Internal 120 termination resistors across IN+ and IN- inputs may also be applied when in RS-422 or RS-485 mode using internal DIP switches P0-P3 on the main PCB inside the enclosure. P0-P3 may

be accessed by removing the 2 fixing screws in the rear panel and sliding the PCB out of the enclosure.

For clarity, in the 3 examples shown below all 4 data ports D1-D4 are terminated the same, but each data channel may be configured & terminated independently as required. The 3 examples shown are RS-232 (no termination), RS-422 (120 ) or RS-485 (120 ).

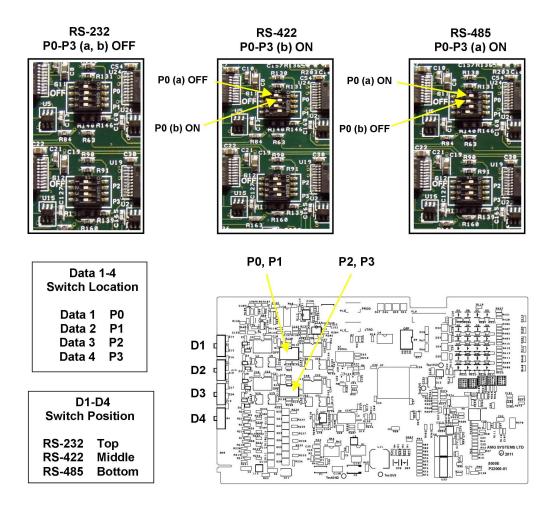

# **Alarm Channel Configuration**


The AMG5913-2A9 provides 8 bi-directional contact closure inputs / alarm outputs.

Each ALARM IN input is via an internal 10k series resistor with a 47k pull-up resistor to the internal +3V3 supply.

Each ALARM OUT output can receive an on/off signal from an **AMG5914-2A9** and is typically used to convey contact closure status. Each alarm output is an NPN open collector circuit with a maximum rated continuous load of 500mA / 24Vdc.

# Alarm Channel Circuit

The output of each alarm channel is an NPN open collector transistor circuit, with an absolute maximum rating of 1A / 60V. There is a common GND for all alarm channels.

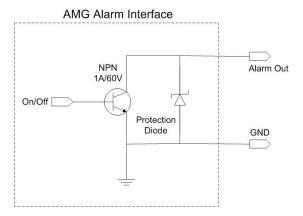

The alarm output circuit is designed for low dc voltage / low current operation and has minimal internal protection. If an alarm output is used to drive an external relay circuit, the external crcuit MUST include a protection (flyback) diode connected across the relay to prevent the high voltage generated from a back EMF causing damage due to the AMG output transistor.

# **Alarm Interface Connections**

Connector Pin	Alarm Interfaces	
No.	Alarm IN 1-4, 5-8	Alarm OUT 1-4 , 5-8
1	ALARM 1/5 IN	ALARM 1/5 OUT
2	ALARM 2/6 IN	ALARM 2/6 OUT
3	GND	GND
4	ALARM 3/7 IN	ALARM 3/7 OUT
5	ALARM 4/8 IN	ALARM 4/8 OUT

# **Audio Channel Configuration**

# **Audio Channel Configuration**

The AMG5913-2A9 provides two bi-directional audio channels.

Each audio channel input can be configured as a single-ended high impedance 10k input with GND reference or alternativly as a balanced 600 input pair. The input impedance is selected using jumpers on the audio expansion board JP1 (Channel 1) or JP2 (Channel 2), the default setting is balanced 600 .

JP1/JP2 1-2 . High Impedance 10k

JP1/JP2 2-3 . Balanced 600

# Audio Interface Connections Ch1 & Ch2

Connector Pin No.	Balanced Input 600Ω	High Z input 10kΩ
1	OUT -	OUT -
2	OUT +	OUT +
3	GND	GND
4	IN +	IN
5	IN -	GND

# Physical Information

### **Dimensions**

Height	112mm
Width	
Depth	
Weight	750grams

# **Mounting Details**

The AMG unit is supplied with a clip-on mounting bracket which should be attached to a panel or wall using 2 off 4.0mm screws, see diagram on page 1 for dimensions. The unit is clipped into the mounting bracket, and is then held firmly in position.

# Safety

AMG Optical Fibre Products use Class 1 laser systems in accordance with EN 60825-2:2000.

It is always advisable to follow good practice when working with optical fibre systems. This includes:

- Do not stare with unprotected eyes or with any unapproved collimating device at fibre ends or connector faces, or point them at other people.
- Use only approved filtered or attenuating viewing aids

For other safety issues and advice on good practice associated with optical fibre systems, please see EN 60825-2:2000 or your local safety officer.

# Maintenance and Repair

There are no user serviceable parts within AMG products. See unit data sheet for full specification. In case of problem or failure, please call your local support centre or contact: **AMG Systems Ltd.** at 3 The Omega Centre, Stratton Business Park, Biggleswade, Beds., SG18 8QB, UK.

Phone +44 (0) 1767 600 777 Technical Support +44 (0) 1767 604 491

Email techsupport@amgsystems.com