


4 Channel Video Insert Unit with up to 16 Bi-directional Data and Audio Channels and Dual Redundant Operation

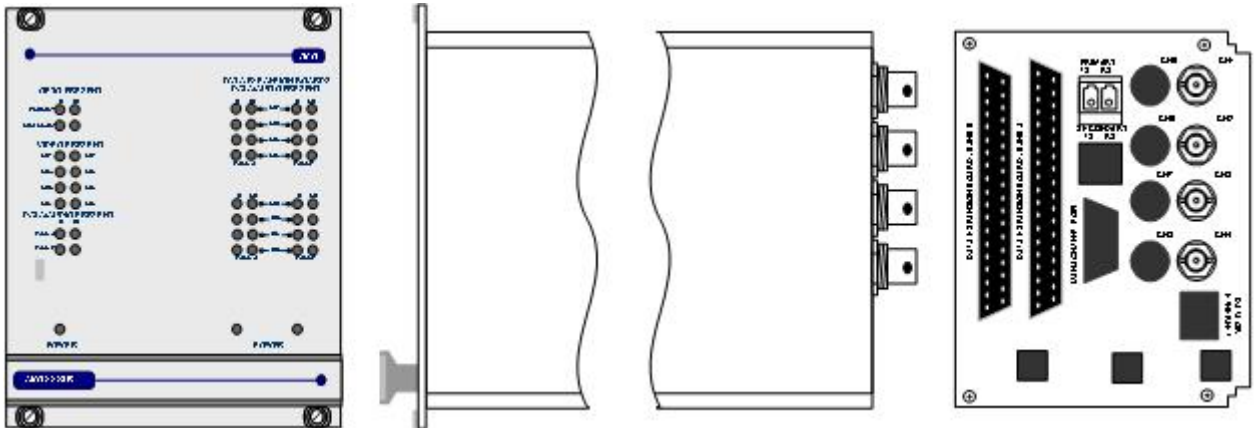

The **AMG3747R-DR-SF** is a rackmount four channel video insert unit designed to transmit 4 video signal and transmit and receive up to 16 data or audio signals over one singlemode fibre with Dual Redundant operation.

The 16 data/audio channel interfaces, whether RS-232, RS-422, RS-485, 20mA, TTL, Contact Closure, Lonworks or Audio, are defined at manufacture by the addition of daughter boards fitted onto the Data Expansion Boards A&B.

The **AMG3747R-DR-SF** is designed to plug into an AMG2009 or AMG2015 subrack, which in turn fits into a 19" rack system..

The **AMG3747R-DR-SF** is designed to operate with an **AMG3788N-DR-SF** or rackmount equivalent **AMG3788RN-DR-SF** eight channel video and data receive unit. Each receiver will 'drop off' up to eight video channels which are being transmitted around the fibre ring from up to eight single channel insert units, or any equivalent combinations of single, dual or four channel video and data insert units.

Contents

Introduction	3
Unit Functional Schematic.....	3
Video Input Channel Configuration	3
Dual Redundant Operation.....	3
Connections	5
Video Input Connections	5
Optical Connections	5
Power Connection	5
Data Channel Connections.....	5
Data and Audio Channel Configuration	6
Data Interface Daughter Board Options	6
Data and Audio Channel Configuration.....	6
Daughter Board Layout	6
Unpopulated Data Bank A Jumpers	6
Data and Audio Daughter Board Fitting Instruction.....	7
Data and Audio Connections.....	8
Front Panel Indicators	9
Power LED.....	9
Video Input LED's	9
Fibre Optic LED's	9
Low Speed Data LEDs	9
Physical Information	11
Dimensions	11
Mounting Details.....	11
Removal / replacement from / to the Case	11
Safety	11
Maintenance and Repair	11


Introduction

Unit Functional Schematic

The **AMG3747R-DR-SF** transmits and receives the optical signals from both a primary and secondary optical channel.

These optical channels are transmitted on the same optical fibre in opposite directions, operating at different wavelengths.

The primary channel operates on 1310nm and the secondary channel on 1550nm.

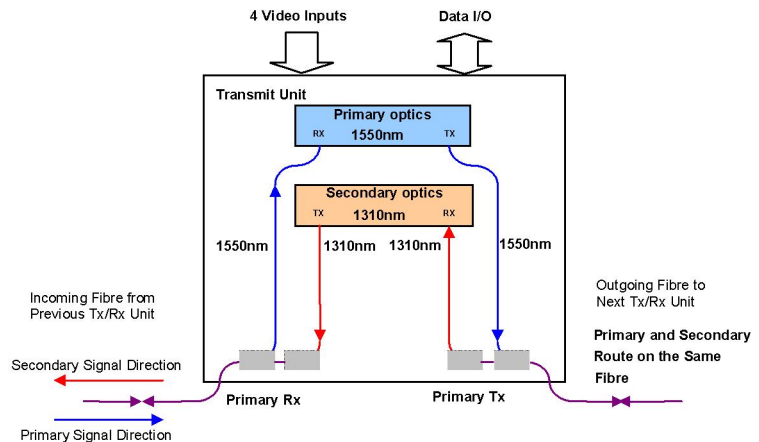

The **AMG3747R-DR-SF** receives and drops off data signals transmitted from an **AMG3788N-DR-SF** or **AMG3788RN-DR-SF** receiver. It then inserts video and data signals onto the outgoing optical signal.

As each unit regenerates the optical signal, the optical dynamic range between each optically connected node is 17dB.

Video Input Channel Configuration

At the **AMG3747-DR-SF** or rackmount **AMG3747R-DR-SF** insert unit, video signals present at the BNC inputs can be inserted on one to eight video channels transmitted on the optical fibre. The first video channel number of each insert unit is set by the rotary switch on the front panel of the unit.

It is normal to set each insert unit to a different channel number. If the same number is used twice, an insert unit connected 'down stream' on the primary optical route will 'over-write' any coincident video channels coming from the previous insert unit and those video signals will be lost.

The switch channel numbers 1 to 8, correspond to video channels 1-8. Unused switch channel numbers 0 & 9 duplicate video channel selections 1 & 8 respectively. i.e. setting switch to position 0 or 1 selects video channel 1 and setting switch to position 8 or 9 selects channel 8.


Dual Redundant Operation

In normal operation where optical connection to both the previous unit and subsequent insert units is OK, video and data signals are transmitted on the primary output and data is received from the primary input. The secondary optical input is independent and is regenerated on the secondary output.


If the primary input signal is not present, a unit will shut down the secondary output to inform the previous unit that the signal route is not OK. The previous unit will then send out the video and data signals on its secondary output in the opposite direction. This signal will be repeated around the ring to get back to this unit on the secondary route. As the primary input is not present on this unit, the data signal will now be taken from the secondary optical input thus maintaining integrity of the data transmission.

If the secondary input signal is not present, an insert unit will assume that the route to the next unit is not OK and send out the video and data signal on the secondary optical output. This video and data will be transmitted to the next unit around the ring in the opposite direction on the secondary route.


The **AMG3747-DR-SF** or rackmount **AMG3747R-DR-SF** is designed to be connected in a ring or point to point system. In a ring system, single, dual and four channel insert units respectively can be combined to make up an 8 channel video transmission system as illustrated below.

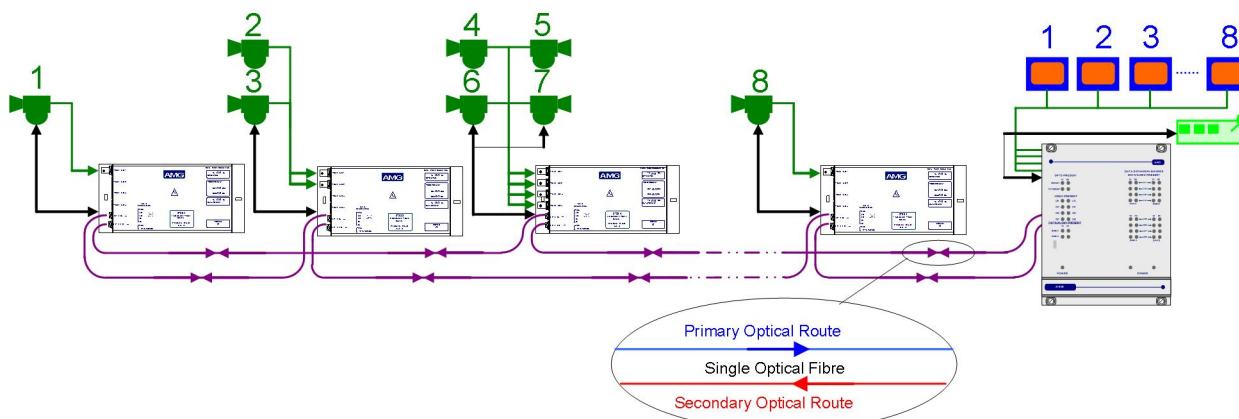

If a fibre link is broken, operation of the ring continues by making use of the secondary optical fibre route as below:

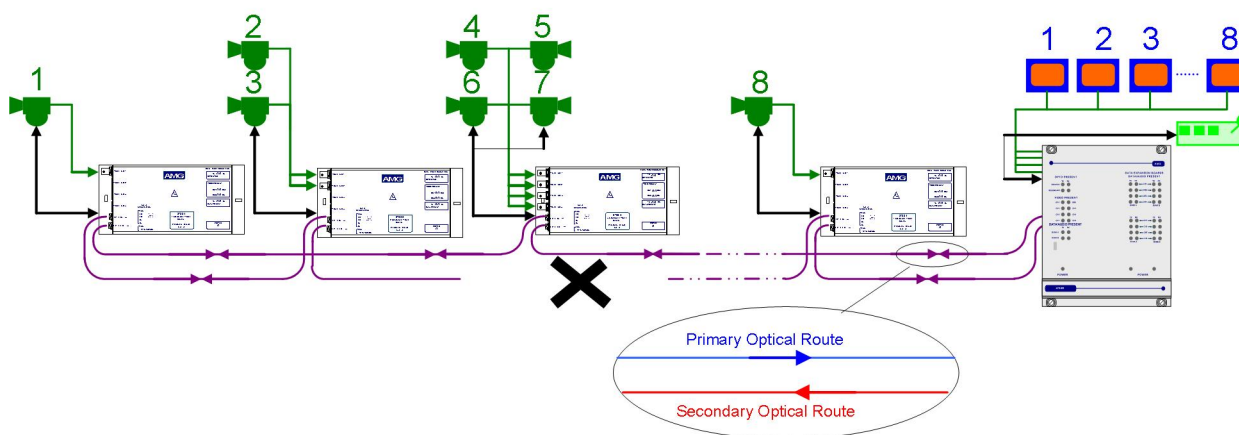

If multiple breaks occur, operation is maintained with all the units still physically connected to the receiver. For the scenario shown below camera signals and control would now be lost from cameras 1, 2 and 3 as there is now no physical connection between the transceivers and the receiver. However operation of cameras 4,5,6,7 and 8 remains fully functional.

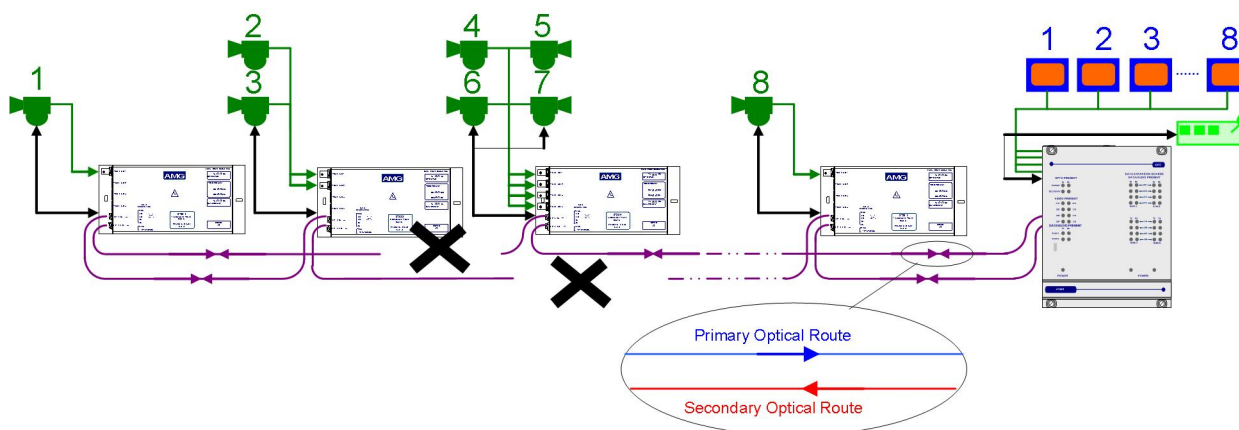

Connections

Video Input Connections

No. of channels..... 4
Connector 75 ohm BNC Socket.
Input Impedance 75 ohm terminated.
Input Level 1 volt p-p nominal
Frequency Response 10Hz to 7MHz.

Optical Connections

PRIMARY OPTO OUT

Connector LC/PC
Primary Optical Launch Power -5dBm
Wavelength..... 1310nm
Secondary Optical Sensitivity -22dBm
Wavelength..... 1310nm

PRIMARY OPTO IN

Connector LC/PC
Primary Optical Sensitivity -22dBm
Wavelength..... 1310nm
Secondary Optical Launch Power -5dBm
Wavelength..... 1310nm

Power Connection

Power supply from plug in connection on the AMG2009 / AMG2015 subrack
Power consumption 15 Watts max.

Data Channel Connections

Total No. of Data Channels 16 channels

Data/Audio Channels – BANK A 8 channels
Data/Audio Channels – BANK B 8 channels
Connectors Two 37-way D-Type female connectors - shielded.
Connections..... See below for connection and configuration

For the data or audio channels to be present, the appropriate data daughter boards have to be fitted into the data expansion board slots.

Data and Audio Channel Configuration

The **AMG3747-DR-SF** and rackmount equivalent **AMG3747R-DR-SF** sends and receives data in two banks - Bank A and Bank B each of which carries up to 8 channels of data / audio. The physical interface is determined by the fitting of AMG data or audio daughter boards onto the appropriate data expansion board slots.

Data Interface Daughter Board Options

The data interface daughter board options are as follows:


Option Code 'x'	Part No.	Description
0	X12542	4 Wire Audio Interface Daughter Board
1	X04057	RS422/485 Data Interface Daughter Board
2	X04049	RS232 Data Interface Daughter Board
3	X04058	20mA Current Loop Data Interface Daughter Board
4	X12579	TTL Data Interface Daughter Board
5	X12578	Contact Closure Data Interface Daughter Board
6	X13038	FTT10A Echelon Lonworks Data Interface Daughter Board

Data and Audio Channel Configuration

The data expansion board slots are accessed by removing the AMG unit from its case. A data channel is active when a daughter board is installed in the required data channel slot. Each data interface board enables one bi-directional channel.


Daughter Board Layout

The channel slots are as follows:

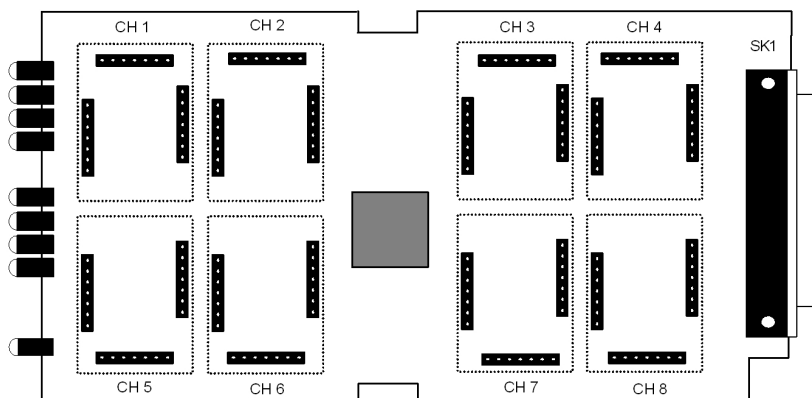

Unpopulated Data Bank A Jumpers

Note: If data or audio daughter boards are not fitted at any location on the Bank A data expansion board, a 2-pin jumper **MUST** be fitted across pins 5-6 on each empty header as shown below in RED. This only applies to Bank A, not bank B and applies to PL1, PL3, PL5, PL7, PL9, PL12, PL15, PL18.

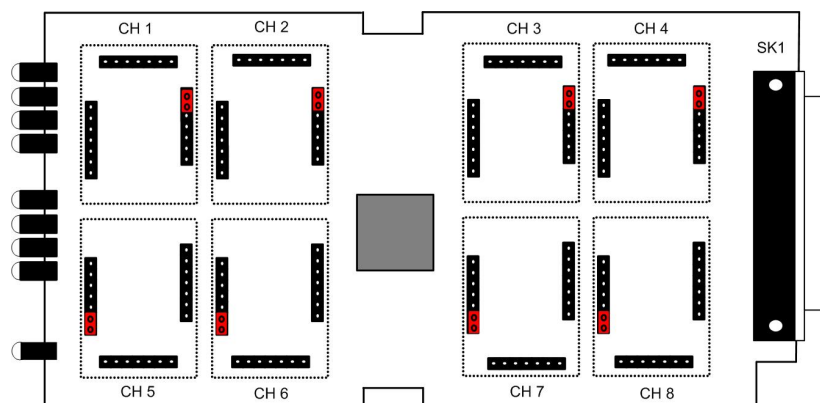


Data and Audio Daughter Board Fitting Instruction

The data and audio daughter boards pushed on to the pin headers mounted on the data expansion boards. Ensure that the connectors are lined up correctly and not offset before pushing firmly in place. Note that the data and audio channel numbers are associated with each slot. This allocates the pin numbers on the rear panel connector together with the front panel LED indicators.

Data and Audio Connections

The BANK A/B data/audio channels pin connections on the rear panel connectors are as follows:

Pin No.	Description	Bank
1	Audio/Data CH1 IN + (A)	A/B
2	Audio/Data CH1 IN - (B)	A/B
3	Audio/Data CH2 IN + (A)	A/B
4	Audio/Data CH2 IN - (B)	A/B
5	Audio/Data CH3 IN + (A)	A/B
6	Audio/Data CH3 IN - (B)	A/B
7	Audio/Data CH4 IN + (A)	A/B
8	Audio/Data CH4 IN - (B)	A/B
9	GND	A/B
10	GND	A/B
11	GND	A/B
12	Audio/Data CH5 IN + (A)	A/B
13	Audio/Data CH5 IN - (B)	A/B
14	Audio/Data CH6 IN + (A)	A/B
15	Audio/Data CH6 IN - (B)	A/B
16	Audio/Data CH7 IN + (A)	A/B
17	Audio/Data CH7 IN - (B)	A/B
18	Audio/Data CH8 IN + (A)	A/B
19	Audio/Data CH8 IN - (B)	A/B

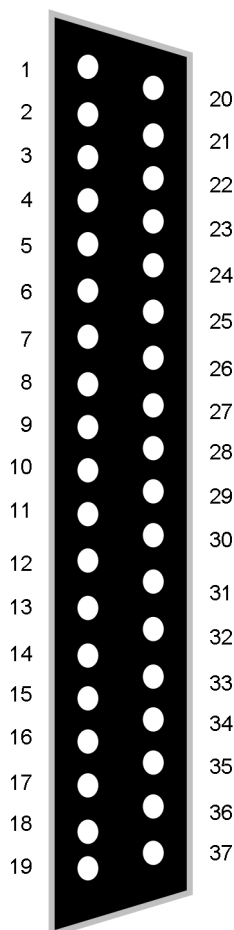

Pin No.	Description	Bank
20	Audio/Data CH1 OUT + (A)	A/B
21	Audio/Data CH1 OUT - (B)	A/B
22	Audio/Data CH2 OUT + (A)	A/B
23	Audio/Data CH2 OUT - (B)	A/B
24	Audio/Data CH3 OUT + (A)	A/B
25	Audio/Data CH3 OUT - (B)	A/B
26	Audio/Data CH4 OUT + (A)	A/B
27	Audio/Data CH4 OUT - (B)	A/B
28	GND	A/B
29	GND	A/B
30	Audio/Data CH5 OUT + (A)	A/B
31	Audio/Data CH5 OUT - (B)	A/B
32	Audio/Data CH6 OUT + (A)	A/B
33	Audio/Data CH6 OUT - (B)	A/B
34	Audio/Data CH7 OUT + (A)	A/B
35	Audio/Data CH7 OUT - (B)	A/B
36	Audio/Data CH8 OUT + (A)	A/B
37	Audio/Data CH8 OUT - (B)	A/B

Note: (A) or (B) in brackets in above table refers to RS485/RS422 data specification not Bank A, B.

See Data or Audio Daughter Board Instruction Sheet for meaning of Audio/Data IN+, Audio/Data IN-, Audio/Data OUT+, and Audio/Data OUT- for each data type.

Front Panel Indicators

Power LED

Power	Green	-	unit powered
	Off	-	no power applied to unit

Video Input LED's

Video Present CH1	Green	-	video signal present on input BNC
	Org	-	channel present but no video on I/P BNC

Fibre Optic LED's

Primary Opto Sync TX	Green	-	optical channel transmitting
	Off	-	optical channel not transmitting
Primary Opto Sync RX	Green	-	optical channel receiving
	Org	-	optical channel receiving but not sync.
	Off	-	optical channel not receiving
Secondary Opto Sync TX	Green	-	optical channel transmitting
	Off	-	optical channel not transmitting
Secondary Opto Sync RX	Green	-	optical channel receiving
	Org	-	optical channel receiving but not sync.
	Off	-	optical channel not receiving

Low Speed Data LEDs

BANK A or B (When RS232 data daughter board fitted)

Data Present CH1-16 TX	Green	-	logic zero (+V) present on IN+
	Red	-	logic transitions present on IN+
	Off	-	logic one (-V) present on IN+

This represents the data signals being transmitted on the optical fibre

Data Present CH1-16 RX	Green	-	logic zero (+V) present on OUT+
	Red	-	logic transitions present on OUT+
	Off	-	logic one (-V) present on OUT+

This represents the data signals being received on the optical fibre

BANK A or B (When RS485 / RS422 data daughter board fitted)

Data Present CH1-16 TX	Green	-	logic zero (+V, -V) present on IN+, IN-
	Red	-	logic transitions present on IN+, IN-
	Off	-	logic one (-V, +V) present on IN+, IN-

This represents the data signals being transmitted on the optical fibre

Data Present CH1-16 RX	Green	-	logic zero (+V, -V) present on OUT+, OUT-
	Red	-	logic transitions present on OUT+, OUT-
	Off	-	logic one (-V, +V) present on OUT+, OUT-

This represents the data signals being received on the optical fibre

BANK A or B (When audio daughter board fitted)

Audio Present TX.....	Green	-	audio present > -40dBm
	Red	-	audio present > 0dBm (overload at +6dBm)
	Off	-	audio not present or < -40dBm

This represents the data signals being transmitted on the optical fibre

Audio Present RX	Green	-	audio present > -40dBm
	Red	-	audio present > 0dBm (overload at +6dBm)
	Off	-	audio not present or < -40dBm

This represents the audio signals being received from the optical fibre.

Physical Information

Dimensions

Height 3U Plug-in
Width 21HP
Depth 170mm excluding connectors
Weight 1200grams

Mounting Details

The unit is designed to be mounted within an AMG2009 or AMG2015 Subrack on standard card guides.

Removal / replacement from / to the Case

Note: - The AMG unit PCB's are static sensitive. Handle with proper care and use normal electrostatic discharge (ESD) procedures. Use properly grounded protection (for example, wrist straps) when handling the PCB.

To remove units from the case to access the data expansion boards and the daughter boards, remove the 2 or 4 fixing screws on the rear panel and slide the PCB's out of the case. Ensure that the fibres do not snag or get trapped.

To replace the PCB's into the case, slide the PCB's gently into the case aligning the boards with the appropriate slots. Ensure that the fibre do not snag or get trapped.

Safety

AMG Optical Fibre Products use Class 1 laser systems in accordance with EN 60825-2:2000.

It is always advisable to follow good practice when working with optical fibre systems. This includes:

- Do not stare with unprotected eyes or with any unapproved collimating device at fibre ends or connector faces, or point them at other people.
- Use only approved filtered or attenuating viewing aids

For other safety issues and advice on good practice associated with optical fibre systems, please see EN 60825-2:2000 or your local safety officer.

Maintenance and Repair

There are no user serviceable parts within AMG products. See unit data sheet for full specification.

In case of problem or failure, please call your local support centre or contact: **AMG Systems Ltd.** at 3 The Omega Centre, Stratton Business Park, Biggleswade, Beds., SG18 8QB, UK.

Phone	+44 (0) 1767 600 777
Technical Support	+44 (0) 1767 604 491
Email	techsupport@amgsystems.com

This page is intentionally blank.