


## AMG5713A9-DIN Instruction Manual

# Single Channel Video Transmit Unit with one Bi-directional Data Channel, one Bi-directional Alarm and one Bi-directional Audio Channel for a Singlemode Fibre Link

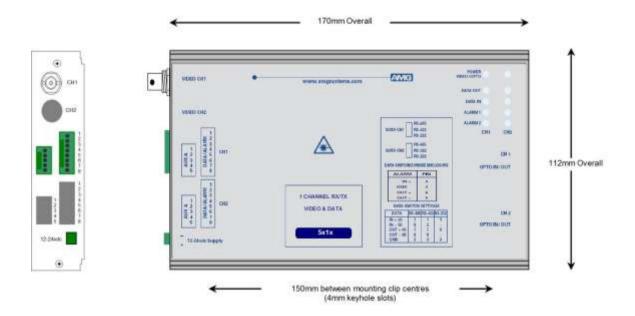

The **AMG5713A9-DIN** is a DIN Rail mountable standalone one channel video transmit unit designed to transmit 1 video signal and transmit & receive 1 data signal, 1 Bi-directional alarm and 1 Bi-directional audio channel over one Singlemode optical fibre.

The AMG5713A9-DIN is designed to be powered using an AMG2001 standalone power supply.

The **AMG5713A9-DIN** is designed to operate with an **AMG5714A9** / **AMG5714A9R** single channel receive unit in a point to point configuration. The R suffix in the partno. indicates a rackmount configuration.

### **Contents**


Introduction	3
Unit Functional SchematicOptical Connection	3
1 Channel Video, Data, Bi-directional Alarm & Audio	3
Connections	4
Video Input Connections	4
Optical Connections Singlemode	4
Power Connection	
Data and Alarm Channel Connections	
	_
Front Panel Indicators	6
Power LED	
Low Speed Data LEDs	
Alarm LEDs	
Audio LEDs	δ
Data and Alarm Channel Configuration	7
Data Channel Configuration	7
Data Interface Connections	
Alarm Channel Configuration	
Alarm Interface Connections	
Audio Channel Configuration	
Audio Interface Connections	9
Physical Information	10
Dimensions	10
Mounting Details	10
Safety	10
Maintenance and Repair	10

#### Introduction

#### **Unit Functional Schematic**

The AMG5713A9-DIN transmits 1 video, 1 data, 1 Bi-directional alarm and 1 audio signal to the AMG5714A9 receive unit.


It also receives 1 data, 1 Bi-directional alarm and 1 audio signal transmitted from the **AMG5714A9**.

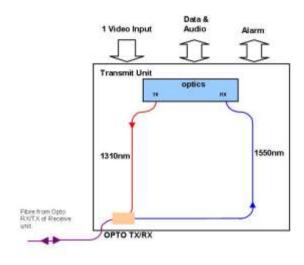

#### **Optical Connection**

The **AMG5713A9-DIN** connections are illustrated in the following example which shows an **AMG5713A9-DIN** transmit unit together with an **AMG5714A9-DIN** standalone receive unit configured as a single channel point to point system.

#### 1 Channel Video, Data, Bi-directional Alarm & Audio

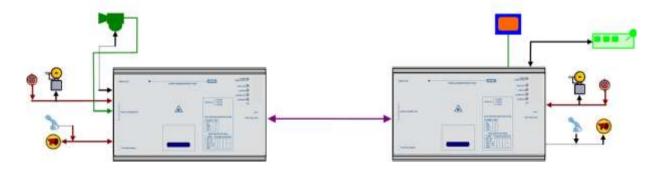

#### **Connections**

Video Input Connections	
No. of channels	1
Connector	
Input Impedance	
Input Level	
Frequency Response	10Hz to 7MHz.
Optical Connections Singlemo	
No. of Optical Connections	
Optical Fibre	<b>y</b>
Connector	50/PC
Primary Optical Launch Power	10dBm
Transmit Wavelength	1310nm
Primary Optical Sensitivity	30dBm
Receive Wavelength	
Minimum Optical Dynamic Range	20dB.
Power Connection	
	Removable 2-pin, 3.81mm, Screw Terminal
Connector Partno	
Supply Voltage	
Maximum Power	
Data and Alarm Channel Conn	ections
No. of Data Channels	1
No. of Alarms	1
Connectors	Removable 8-pin, 2.5mm, Screw Terminal
Connector Partno	
	1106111X 1001303
	RS-232, RS-422 or R-S485. Selected by slide switch inside
	RS-232, RS-422 or R-S485. Selected by slide switch inside enclosure. *See appropriate section on how to remove the case
Data Interfaces	RS-232, RS-422 or R-S485. Selected by slide switch inside enclosure. *See appropriate section on how to remove the case for access to the data switches
Data Interfaces	RS-232, RS-422 or R-S485. Selected by slide switch inside enclosure. *See appropriate section on how to remove the case for access to the data switches
RS-485 – Switch Position - RS-422 – Switch Posit	RS-232, RS-422 or R-S485. Selected by slide switch inside enclosure. *See appropriate section on how to remove the case for access to the data switches
RS-485 – Switch Position - RS-422 – Switch Position - RS-232 – Switch Posit	RS-232, RS-422 or R-S485. Selected by slide switch inside enclosure. *See appropriate section on how to remove the case for access to the data switches  Top Middle Bottom
RS-485 – Switch Position - RS-422 – Switch Position - RS-232 – Switch Position - E	RS-232, RS-422 or R-S485. Selected by slide switch inside enclosure. *See appropriate section on how to remove the case for access to the data switches  Top Middle BottomContact Closure pull-up is 330R to +3V3
RS-485 – Switch Position - RS-422 – Switch Position - RS-232 – Switch Position - E	RS-232, RS-422 or R-S485. Selected by slide switch inside enclosure. *See appropriate section on how to remove the case for access to the data switches  Top Middle Bottom
RS-485 – Switch Position - RS-422 – Switch Position - RS-232 – Switch Position - E	RS-232, RS-422 or R-S485. Selected by slide switch inside enclosure. *See appropriate section on how to remove the case for access to the data switches  Top Middle BottomContact Closure pull-up is 330R to +3V3
RS-485 – Switch Position - RS-422 – Switch Position - RS-232 – Switch Position - RS-232 – Switch Position - RAIARM Input	RS-232, RS-422 or R-S485. Selected by slide switch inside enclosure. *See appropriate section on how to remove the case for access to the data switches  Top Middle Bottom Contact Closure pull-up is 330R to +3V3Solid-state Relay, maximum 150mA at 125Vac/dc, Ron < 6.5Ω
RS-485 – Switch Position - RS-422 – Switch Position - RS-232 – Switch Posit	RS-232, RS-422 or R-S485. Selected by slide switch inside enclosure. *See appropriate section on how to remove the case for access to the data switches  Top Middle Bottom Contact Closure pull-up is 330R to +3V3Solid-state Relay, maximum 150mA at 125Vac/dc, Ron < 6.5Ω 1 per video channel.
RS-485 – Switch Position - RS-422 – Switch Position - RS-232 – Switch Posit	RS-232, RS-422 or R-S485. Selected by slide switch inside enclosure. *See appropriate section on how to remove the case for access to the data switches  Top Middle Bottom Contact Closure pull-up is 330R to +3V3Solid-state Relay, maximum 150mA at 125Vac/dc, Ron < 6.5Ω 1 per video channel. Removable 5-pin, 2.5mm, Spring Terminal
RS-485 – Switch Position - RS-422 – Switch Position - RS-232 – Switch Posit	RS-232, RS-422 or R-S485. Selected by slide switch inside enclosure. *See appropriate section on how to remove the case for access to the data switches  Top Middle Bottom Contact Closure pull-up is 330R to +3V3Solid-state Relay, maximum 150mA at 125Vac/dc, Ron < 6.5Ω 1 per video channel. Removable 5-pin, 2.5mm, Spring Terminal
RS-485 – Switch Position - RS-422 – Switch Position - RS-232 – Switch Posit	RS-232, RS-422 or R-S485. Selected by slide switch inside enclosure. *See appropriate section on how to remove the case for access to the data switches  Top Middle Bottom Contact Closure pull-up is 330R to +3V3 Solid-state Relay, maximum 150mA at 125Vac/dc, Ron < 6.5Ω 1 per video channel. Removable 5-pin, 2.5mm, Spring Terminal Phoenix 1881354 0dBm

Input impedance	10kΩ / 600Ω
Output impedance	
Catpat III podarios III III III	
	4011- 40 201711-
Frequency response	10HZ tO ZUNHZ

Audio Input impedance is selected by removable jumper JP1 or JP2 on Audio Expansion board inside enclosure. \*See appropriate section on how to remove the case for access to the data/audio switches.

- 1-2 High Impedance  $10k\Omega$
- 2-3 Balanced  $600\Omega$

#### Front Panel Indicators

#### Power LED

Power / Video / Opto...... Green - Video present & opto sync.

R/G - Opto sync. but no video present. G/R - Video present but no opto sync.

Red - No opto sync.

Off - No power applied to unit

#### Low Speed Data LEDs

Data Present IN (RS485 or RS422) ....Green - logic zero (+V, -V) present on IN+, IN-

Red - logic one (-V,V+) present on IN+, IN-Off - tri-state off or no connection on IN+, IN-

Data Present IN (RS232)......Green - logic zero (+V) present on input IN+

Red - logic transitions present on input IN+
Off - logic one (-V) present on input IN+

IN corresponds to the data signals being transmitted onto the optical fibre.

Data Present OUT (RS485 or RS422) Green - logic zero (+V,-V) present on OUT+, OUT-

Red - logic one (-V,+V) present on OUT+, OUT-

Off - tri-state off or no connection on OUT+, OUT-

Data Present OUT (RS232)......Green - logic zero (+V) present on OUT+

Red - logic transitions present on OUT+
Off - logic one (-V) present on OUT+

OUT corresponds to the data signals being received from the optical fibre.

#### Alarm LEDs

ALARM IN ......Green - Alarm ON / Contacts closed.

Off - Alarm OFF / Contacts open.

ALARM OUT......Green - Alarm ON / Contacts closed.

Off - Alarm OFF / Contacts open.

Audio LEDs

Audio Present TX......Green - audio present > -40dBm

Red - audio present > 0dBm (overload at +6dBm)

Off - audio not present or < -40dBm

This represents the audio signals being transmitted on the optical fibre

Audio Present RX ......Green - audio present > -40dBm

Red - audio present > 0dBm (overload at +6dBm)


Off - audio not present or < -40dBm

This represents the audio signals being received from the optical fibre.

#### Data and Alarm Channel Configuration

The **AMG5713A9-DIN** transmit unit sends and receives data to/from an **AMG5714A9** or rackmount equivalent **AMG5714A9R** receive unit. The physical data interface RS-485, RS-422 or RS-232 is selectable by the user with the slide switch mounted on the main PCB inside the enclosure.

One bi-directional alarm is also provided. The alarm input is typically connected to a contact closure switch. The alarm output can receive an on/off signal from an **AMG5714A9** and is typically used to convey contact closure status.

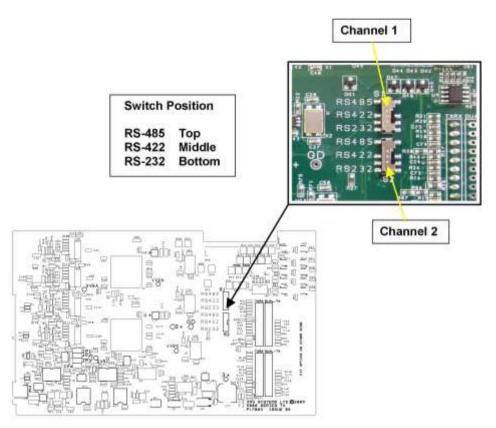

#### **Data Channel Configuration**

Each low speed data channel provides an RS-232, RS-422 (full duplex, four wire) or RS-485 (half duplex, two wire) interface defined by the corresponding mode switch inside the enclosure. Every data channel as shipped from the factory is set up for RS-485 operation unless otherwise requested.

The data input for both the RS-485 and the RS-422 modes detects a tri-state input condition by monitoring the differential voltage level across the input. A differential level below 600mV positive or negative will be detected as a tri-state condition. A level above 600mV positive or negative will be detected as a logic 1 or logic 0 respectively. It is important therefore to terminate the RS-485 bus or the RS-422 input bus using  $120\Omega$  if a pre-bias is present on the RS-485 or RS-422 bus.

A large number of third party equipment manufacturers apply a pre-bias on their RS-485 bus. This pre-bias is applied by pulling one arm of the RS-485 bus high (+5 volts) and the other arm low (0 volts) using high value resistors within the third party equipment. In order to ensure that the AMG equipment detects a tri-state condition, then these resistors should have a value above  $5k\Omega$ . If the third party bias resistors are less the  $750\Omega$  the bus can be multiple terminated as required to ensure that a tri-state level is detected.

The system detects a tri-state input condition on the data channel bus when in RS-485 or RS-422 mode.

#### Data Interface Connections

	Data Channel		
Connector Pin No.	RS-485 [switch top]	RS-422 [switch middle]	RS-232 [switch bottom]
1		IN + (A)	IN
2		IN - (B)	
3	GND	GND	GND
4			
5			
6			
7	IN/OUT + (A)	OUT + (A)	
8	IN/OUT - (B)	OUT - (B)	OUT

Note: (A) or (B) in brackets in the above table refers to RS-485 / RS-422 data specification.

#### **Alarm Channel Configuration**

The AMG5713A9-DIN provides 1 bi-directional alarm output / contact closure input per video channel.

The alarm input is typically connected to a contact closure switch. An ALARM IN+ input incorporates a 330R pull-up resistor to the internal +3V3 supply.

The alarm output can receive an on/off signal from an **AMG5714A9** and is typically used to convey contact closure status. An alarm output uses a solid-state relay, with a maximum load current of 150mA at 125Vac/dc and Ron  $< 6.5\Omega$ .

#### **Alarm Interface Connections**

Connector Pin No.	Alarm Interface	
	Alarm IN	Alarm OUT
1		
2		
3	GND	
4	ALARM IN+	
5		ALARM OUT -
6		ALARM OUT+
7		
8		

#### **Audio Channel Configuration**

The AMG5713A9-DIN provides one bi-directional audio channel for each video channel.

Each audio channel input can be configured as a single-ended high impedance  $10k\Omega$  input with GND reference or alternativly as a balanced  $600\Omega$  input pair. The input impedance is selected using jumpers on the audio expansion board JP1 (Channel 1) or JP2 (Channel 2), the default setting is balanced  $600\Omega$ .

JP1/JP2 1-2 – High Impedance 10kΩ

JP1/JP2 2-3 – Balanced 600Ω

#### **Audio Interface Connections**

Connector Pin No.	Balanced Input 600Ω	High Z input 10kΩ
1	OUT -	OUT -
2	OUT +	OUT +
3	GND	GND
4	IN+	IN
5	IN -	GND

#### Physical Information

#### **Dimensions**

Height	.112mm
Width	
Depth	
Weight	.600grams

#### Mounting Details

The AMG unit is supplied with a clip-on mounting bracket which is able to mount onto a DIN rail. The unit is clipped into the mounting bracket, and is then held firmly in position.

#### Safety

AMG Optical Fibre Products use Class 1 laser systems in accordance with EN 60825-2:2000.

It is always advisable to follow good practice when working with optical fibre systems. This includes:

- Do not stare with unprotected eyes or with any unapproved collimating device at fibre ends or connector faces, or point them at other people.
- Use only approved filtered or attenuating viewing aids

For other safety issues and advice on good practice associated with optical fibre systems, please see EN 60825-2:2000 or your local safety officer.

#### Maintenance and Repair

There are no user serviceable parts within AMG products. See unit data sheet for full specification.

In case of problem or failure, please call your local support centre or contact: **AMG Systems Ltd.** at 3 The Omega Centre, Stratton Business Park, Biggleswade, Beds., SG18 8QB, UK.

Phone +44 (0) 1767 600 777 Technical Support +44 (0) 1767 604 491

Email techsupport@amgsystems.com

