


AMG5413A9 Instruction Manual

Transmit Unit with one Bi-directional Data Channel, one Bidirectional Alarm and one Bi-directional Audio Channel for a Multimode Fibre Link

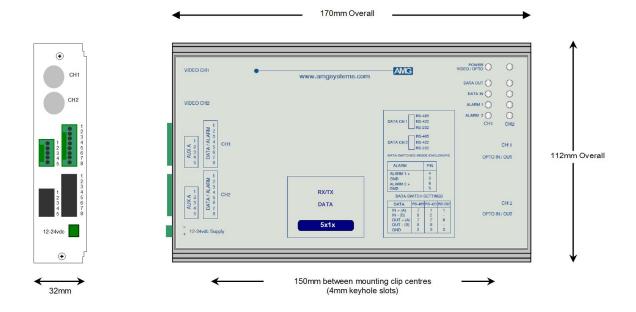

The **AMG5413A9** is a standalone transmit unit designed to transmit & receive one Bi-directional alarm, one Bi-directional audio channel and one Bi-directional data signal over a Multimode optical fibre.

The AMG5413A9 is designed to be powered using an AMG2001 standalone power supply.

The AMG5413A9 is designed to operate with an AMG5414A9 / AMG5414A9R receive unit in a point to point configuration. The R suffix in the partno. indicates a rackmount configuration.

Contents


Introduction	3
Unit Functional Schematic Optical Connection	
Connections	4
Optical Connections Multimode Power Connection	
Data and Alarm Channel Connections Audio Connections	
Front Panel Indicators	6
Power / Opto LED	
Low Speed Data LEDs	
Audio LEDs	
Data and Alarm Channel Configuration	7
Data Channel Configuration	7
Data Interface Connections	
Alarm Channel Configuration	
Alarm Interface Connections	
Audio Channel Configuration Audio Interface Connections	
Audio Interface Connections	
Audio Interface Connections	
Audio Interface Connections Physical Information Dimensions	

Introduction

Unit Functional Schematic


The **AMG5413A9** transmits 1 data, 1 Bidirectional alarm and 1 audio signal to the **AMG5414A9** receive unit.

It also receives 1 data, 1 Bi-directional alarm and 1 audio signal transmitted from the **AMG5414A9**.

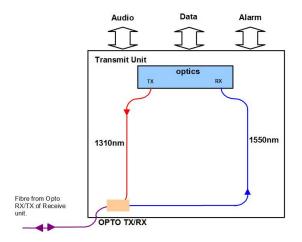

Optical Connection

The **AMG5413A9** connections are illustrated in the following example which shows an **AMG5413A9** transmit unit together with an **AMG5414A9** standalone receive unit configured as a single channel point to point system.

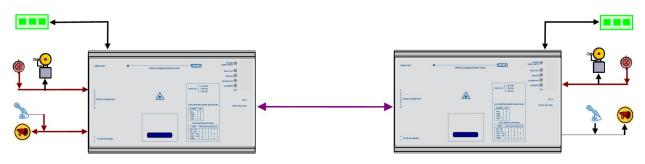

AMG Systems Ltd. reserves the right to make changes to this document without notice. The information herein is believed to be accurate. No responsibility is assumed by AMG for its use.

Page 3 of 12

Connections

Optical Connections Multimode

No. of Optical Connections Optical Fibre Connector	.Multimode 50/125 or 62.5/125**
Minimum Optical Launch Power Transmit Wavelength	
Minimum Optical Sensitivity Receive Wavelength	

Minimum Optical Dynamic Range20dB.

**Note: the transmission distance is limited by the bandwidth of the Multimode optical fibre. The optical data rate is 155Mbits/s, which may restrict operation to a maximum fibre length of 7km, although in most cases the units will operate successfully over longer fibre lengths. It is advisable however for distances greater than 7km, to have the optical fibre tested.

Power Connection

Connector Type	Removable 2-pin, 3.81mm, Screw Terminal
Connector Partno	• •
Supply Voltage	+12 to +15 Volts DC
Maximum Power	

Data and Alarm Channel Connections

No. of Data Channels No. of Alarms	
Connectors Connector Partno	Removable 8-pin, 2.5mm, Screw Terminal Phoenix 1881383
Data Interfaces	RS-232, RS-422 or R-S485. Selected by slide switch inside enclosure. *See appropriate section on how to remove the case for access to the data switches
RS-485 – Switch Position - 1 RS-422 – Switch Position - N RS-232 – Switch Position - E	/iddle
	Contact Closure pull-up is 330R to +3V3 Solid-state Relay, maximum 150mA at 125Vac/dc, Ron < 6.5Ω
Audio Connections	
No. of Audio Channels	1
Connectors Connector Partno	Removable 5-pin, 2.5mm, Spring Terminal Phoenix 1881354
Input level Input overload level	
Input impedance	10kΩ / 600Ω
AMC Systems Ltd. reserves the right to make	changes to this Page 4 of 12 AMC541340 Instruction Sheet

AMG Systems Ltd. reserves the right to make changes to this document without notice. The information herein is believed to be accurate. No responsibility is assumed by AMG for its use.

Page 4 of 12

Output impedance600Ω

Frequency response 10Hz to 20KHz

Audio Input impedance is selected by removable jumper JP1 or JP2 on Audio Expansion board inside enclosure. *See appropriate section on how to remove the case for access to the data/audio switches. 1-2 - High Impedance $10k\Omega$

2-3 – Balanced 600Ω

AMG Systems Ltd. reserves the right to make changes to this document without notice. The information herein is believed to be accurate. No responsibility is assumed by AMG for its use.

Page 5 of 12

Front Panel Indicators

Power / Opto LED	
Power / OptoGreen Red Off	 Unit powered, Opto sync. Unit powered, no Opto sync. No power applied to unit
Low Speed Data LEDs	
Data Present IN (RS485 or RS422)Green Red Off	 logic zero (+V, -V) present on IN+, IN- logic one (-V,V+) present on IN+, IN- tri-state off or no connection on IN+, IN-
Data Present IN (RS232)Green Red Off	 logic zero (+V) present on input IN+ logic transitions present on input IN+ logic one (-V) present on input IN+

IN corresponds to the data signals being transmitted onto the optical fibre.

Data Present OUT (RS485 or RS422) Green Red Off	- -	logic zero (+V,-V) present on OUT+, OUT- logic one (-V,+V) present on OUT+, OUT- tri-state off or no connection on OUT+, OUT-
Data Present OUT (RS232)Green	-	logic zero (+V) present on OUT+
Red	-	logic transitions present on OUT+
Off	-	logic one (-V) present on OUT+

OUT corresponds to the data signals being received from the optical fibre.

Alarm LEDs

ALARM IN	Green Off	-	Alarm ON / Contacts closed. Alarm OFF / Contacts open.
ALARM OUT	Green Off	-	Alarm ON / Contacts closed. Alarm OFF / Contacts open.
Audio LEDs			
Audio Present TX	Green Red Off	- -	audio present > -40dBm audio present > 0dBm (overload at +6dBm) audio not present or < -40dBm

This represents the audio signals being transmitted on the optical fibre

Audio Present RXGr	reen	-	audio present > -40dBm
	Red	-	audio present > 0dBm (overload at +6dBm)
	Off	-	audio not present or < -40dBm

This represents the audio signals being received from the optical fibre.


AMG Systems Ltd. reserves the right to make changes to this document without notice. The information herein is believed to be accurate. No responsibility is assumed by AMG for its use.

Page 6 of 12

Data and Alarm Channel Configuration

The **AMG5413A9** transmit unit sends and receives data to/from an **AMG5414A9** or rackmount equivalent **AMG5414A9R** receive unit. The physical data interface RS-485, RS-422 or RS-232 is selectable by the user with the slide switch mounted on the main PCB inside the enclosure.

One bi-directional alarm is also provided. The alarm input is typically connected to a contact closure switch. The alarm output can receive an on/off signal from an **AMG5414A9** and is typically used to convey contact closure status.

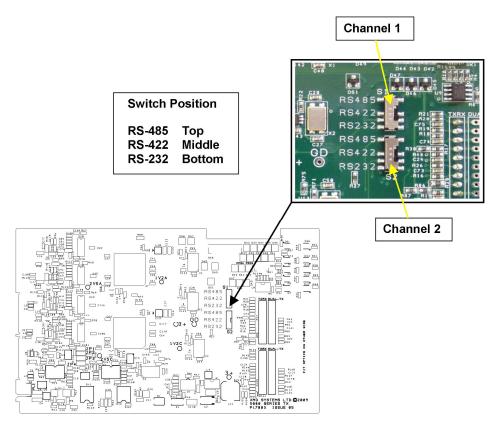

Data Channel Configuration

Each low speed data channel provides an RS-232, RS-422 (full duplex, four wire) or RS-485 (half duplex, two wire) interface defined by the corresponding mode switch inside the enclosure. Every data channel as shipped from the factory is set up for RS-485 operation unless otherwise requested.

The data input for both the RS-485 and the RS-422 modes detects a tri-state input condition by monitoring the differential voltage level across the input. A differential level below 600mV positive or negative will be detected as a tri-state condition. A level above 600mV positive or negative will be detected as a logic 1 or logic 0 respectively. It is important therefore to terminate the RS-485 bus or the RS-422 input bus using 120Ω if a pre-bias is present on the RS-485 or RS-422 bus.

A large number of third party equipment manufacturers apply a pre-bias on their RS-485 bus. This prebias is applied by pulling one arm of the RS-485 bus high (+5 volts) and the other arm low (0 volts) using high value resistors within the third party equipment. In order to ensure that the AMG equipment detects a tri-state condition, then these resistors should have a value above $5k\Omega$. If the third party bias resistors are less the 750 Ω the bus can be multiple terminated as required to ensure that a tristate level is detected.

The system detects a tri-state input condition on the data channel bus when in RS-485 or RS-422 mode.

AMG Systems Ltd. reserves the right to make changes to this document without notice. The information herein is believed to be accurate. No responsibility is assumed by AMG for its use.

Page 7 of 12

Data Interface Connections

	Data Channel		
Connector Pin No.	RS-485 [switch top]	RS-422 [switch middle]	RS-232 [switch bottom]
1		IN + (A)	IN
2		IN - (B)	
3	GND	GND	GND
4			
5			
6			
7	IN/OUT + (A)	OUT + (A)	
8	IN/OUT - (B)	OUT - (B)	OUT

Note: (A) or (B) in brackets in the above table refers to RS-485 / RS-422 data specification.

Alarm Channel Configuration

The AMG5413A9 provides 1 Bi-directional alarm output / contact closure input.

The alarm input is typically connected to a contact closure switch. An ALARM IN+ input incorporates a 330R pull-up resistor to the internal +3V3 supply.

The alarm output can receive an on/off signal from an **AMG5414A9** and is typically used to convey contact closure status. An alarm output uses a solid-state relay, with a maximum load current of 150mA at 125Vac/dc and Ron < 6.5Ω .

Connector Pin No.	Alarm Interface		
	Alarm IN	Alarm OUT	
1			
2			
3	GND		
4	ALARM IN +		
5		ALARM OUT -	
6		ALARM OUT +	
7			
8			

Alarm Interface Connections

AMG Systems Ltd. reserves the right to make changes to this document without notice. The information herein is believed to be accurate. No responsibility is assumed by AMG for its use.

Audio Channel Configuration

The AMG5413A9 provides one bi-directional audio channel.

The audio channel input can be configured as a single-ended high impedance $10k\Omega$ input with GND reference or alternativly as a balanced 600Ω input pair. The input impedance is selected using jumpers on the audio expansion board JP1 (Channel 1) or JP2 (Channel 2), the default setting is balanced 600Ω .

JP1/JP2	1-2 – High Impedance 10kΩ
JP1/JP2	$2-3 - Balanced 600\Omega$

Audio Interface Connections

Connector Pin No.	Balanced Input 600Ω	High Z input 10kΩ
1	OUT -	OUT -
2	OUT +	OUT +
3	GND	GND
4	IN +	IN
5	IN -	GND

AMG Systems Ltd. reserves the right to make changes to this document without notice. The information herein is believed to be accurate. No responsibility is assumed by AMG for its use.

Page 9 of 12

Physical Information

Dimensions

Height	112mm
Width	170mm (excluding connectors)
Depth	35mm
Weight	600grams

Mounting Details

The AMG unit is supplied with a clip-on mounting bracket which should be attached to a panel or wall using 2 off 4.0mm screws, see diagram on page 1 for dimensions. The unit is clipped into the mounting bracket, and is then held firmly in position.

Safety

AMG Optical Fibre Products use Class 1 laser systems in accordance with EN 60825-2:2000.

It is always advisable to follow good practice when working with optical fibre systems. This includes:

- Do not stare with unprotected eyes or with any unapproved collimating device at fibre ends or connector faces, or point them at other people.
- Use only approved filtered or attenuating viewing aids

For other safety issues and advice on good practice associated with optical fibre systems, please see EN 60825-2:2000 or your local safety officer.

Maintenance and Repair

There are no user serviceable parts within AMG products. See unit data sheet for full specification. In case of problem or failure, please call your local support centre or contact: **AMG Systems Ltd.** at 3 The Omega Centre, Stratton Business Park, Biggleswade, Beds., SG18 8QB, UK.

Phone	+44 (0) 1767 600 777
Technical Support	+44 (0) 1767 604 491
Email	techsupport@amgsystems.com

This page is intentionally blank.

AMG Systems Ltd. reserves the right to make changes to this document without notice. The information herein is believed to be accurate. No responsibility is assumed by AMG for its use.

Page 11 of 12

This page is intentionally blank.

AMG Systems Ltd. reserves the right to make changes to this document without notice. The information herein is believed to be accurate. No responsibility is assumed by AMG for its use.

Page 12 of 12