


AMG5615A6 Instruction Manual

Single Channel Video Transmit Unit with one Bi-directional Data Channel, two Uni-directional Alarms and one Echelon FTT-10A Data Channel for a Multimode Fibre Link

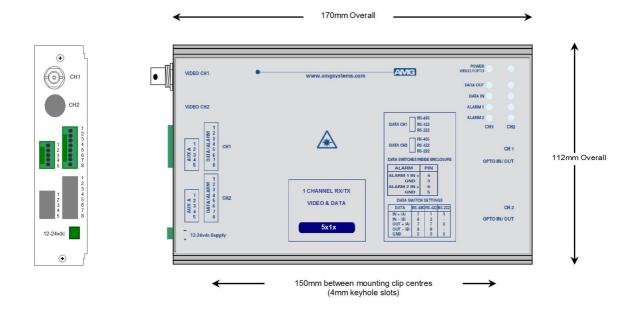

The **AMG5615A6** is a standalone one channel video transmit unit designed to transmit 1 video signal and transmit and receive 1 serial data signal and 1 Echelon FTT-10A data signal plus 2 Uni-directional alarms over one Multimode optical fibre.

The AMG5615A6 is designed to be powered using an AMG2001 standalone power supply.

The AMG5615A6 is designed to operate with an AMG5616A6 / AMG5616A6R single channel or AMG5626A6 / AMG5626A6R dual channel video receive unit in a point to point configuration. The R suffix in the partno. indicates a rackmount configuration.

AMG Systems Ltd. reserves the right to make changes to this document without notice. The information herein is believed to be accurate. No responsibility is assumed by AMG for its use.

Page 1 of 12

Contents


Introduction	3
Unit Functional Schematic Optical Connection	
Connections	4
Video Input Connections	
Optical Connections Multimode Power Connection	
Data and Alarm Channel Connections	. 4
Front Panel Indicators	5
Power LED	
Low Speed Data LEDs Alarm LEDs	
Alaini Leds	. ว
Echelon FTT-10A Data Channel Configuration	6
Data Interface Connections	-
Echelon FTT-10A Data LEDs	. 6
Data and Alarm Channel Configuration	7
Data Channel Configuration	. 7
Data Interface Connections	
Alarm Channel Configuration Alarm Interface Connections	
	_
Physical Information	9
Dimensions	
Mounting Details	. 9
Safety	9
Maintenance and Repair	9

Introduction

Unit Functional Schematic

The **AMG5615A6** transmits 1 video, 1 serial data signal and 1 Echelon FTT-10A data signal plus 2 uni-directional alarm signals to the **AMG5616A6** receive unit.

It also receives 1 serial data signal and 1 Echelon FTT-10A data signal transmitted from the **AMG5616A6**.

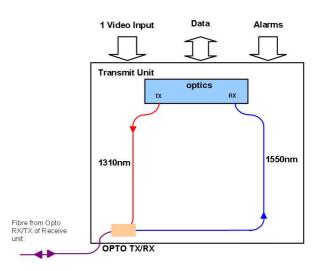

Optical Connection

The **AMG5615A6** connections are illustrated in the following example which shows an **AMG5615A6** transmit unit together with an **AMG5616A6R** rackmount receive unit configured as a single channel point to point system.



AMG Systems Ltd. reserves the right to make changes to this document without notice. The information herein is believed to be accurate. No responsibility is assumed by AMG for its use.

Page 3 of 12

AMG5615A6 Instruction Sheet D20085-01.doc

Connections

Video Input Connections

No. of channels	1
Connector	75 ohm BNC Socket.
Input Impedance	75 ohm terminated.
Input Level	1 volt p-p nominal
Frequency Response	10Hz to 7MHz.

Optical Connections Multimode

No. of Optical Connections	1 per video channel
Optical Fibre	Multimode 50/125 or 62.5/125**
Connector	SC/PC

Minimum Optical Launch Power	10dBm
Transmit Wavelength	1310nm

Minimum Optical Sensitivity.....-30dBm Receive Wavelength.....1550nm

Minimum Optical Dynamic Range20dB.

**Note: the transmission distance is limited by the bandwidth of the Multimode optical fibre. The optical data rate is 155Mbits/s, which may restrict operation to a maximum fibre length of 7km, although in most cases the units will operate successfully over longer fibre lengths. It is advisable however for distances greater than 7km, to have the optical fibre tested.

Power Connection

Connector Type	Removable 2-pin, 3.81mm, Screw Terminal
Connector Partno	• • •
Supply Voltage	+12 to +15 Volts DC
Maximum Power	

Data and Alarm Channel Connections

No. of Data Channels No. of Data Channels No. of Alarms		
Connectors Connector Partnos	Removable 5-pin, 8-pin, 2.5mm, Spring Terminal Phoenix 1881354, 1881383	
Data Interfaces	RS-232, RS-422 or R-S485. Selected by slide switch inside enclosure. *See appropriate section on how to remove the case for access to the data switches	
RS-485 – Switch Position - T RS-422 – Switch Position - M RS-232 – Switch Position - B	/iddle	
Alarm inputsContact Closure pull-up is 330R to +3V3		

AMG Systems Ltd. reserves the right to make changes to this document without notice. The information herein is believed to be accurate. No responsibility is assumed by AMG for its use.

Page 4 of 12

Front Panel Indicators

Power LED

Power / Video / Opto	Green R/G G/R Red Off	- - - -	Video present & opto sync. Opto sync. but no video present. Video present but no opto sync. No opto sync. No power applied to unit
Low Speed Data LEDs			
Data Present IN (RS485 or RS422) 0	Green Red Off	- - -	logic zero (+V, -V) present on IN+, IN- logic one (-V,V+) present on IN+, IN- tri-state off or no connection on IN+, IN-
Data Present IN (RS232)	Green Red Off	- -	logic zero (+V) present on input IN+ logic transitions present on input IN+ logic one (-V) present on input IN+

IN corresponds to the data signals being transmitted onto the optical fibre.

Data Present OUT (RS485 or RS422) Green	-	logic zero (+V,-V) present on OUT+, OUT-
Red	-	logic one (-V,+V) present on OUT+, OUT-
Off	-	tri-state off or no connection on OUT+, OUT-
Data Present OUT (RS232)Green	-	logic zero (+V) present on OUT+
Red	-	logic transitions present on OUT+
Off	-	logic one (-V) present on OUT+

OUT corresponds to the data signals being received from the optical fibre.

Alarm LEDs

Channel 1			
ALARM 1 IN	. Green	-	Alarm ON / Contacts closed.
	Off	-	Alarm OFF / Contacts open.
ALARM 2 IN	. Green	-	Alarm ON / Contacts closed.
	Off	-	Alarm OFF / Contacts open.
Channel 2			
ALARM 1 IN	. Green	-	Alarm ON / Contacts closed.
	Off	-	Alarm OFF / Contacts open.
ALARM 2 IN	. Green	-	Alarm ON / Contacts closed.
	Off	-	Alarm OFF / Contacts open.

Echelon FTT-10A Data Channel Configuration

The AMG5615A6 transmit unit sends and receives Echelon FTT-10A data to/from an AMG5616A6 or rackmount equivalent AMG5616A6R receive unit.

The auxiliary data channel is provided by an X04057 RS-422/RS-485 Daughter Board. It is used when an additional RS-422 or RS-485 data interface is required and provides one bi-directional RS-422 or RS-485 data channel.

Data Interface Connections

Connecter Pin No.	Echelon FTT-10A Data Channel
1	Channel 1 NET_B
2	Channel 1 NET_A
3	GND
4	-
5	-

Echelon FTT-10A Data LEDs

Data type depends on AMG system: RS-232, RS-422, RS-485, 20mA, TTL, or FTT-10A

Data Present INGree	n -	Data channel present but not transmitting
R/C	G -	Data channel transmitting
Off	-	Data channel not present or no connection

IN corresponds to the data signals being transmitted onto the optical fibre.


Data Present OUT	Green	-	Data channel present but not transmitting
	R/G	-	Data channel receiving
	Off	-	Data channel not present or no connection

OUT corresponds to the data signals being received from the optical fibre.

Data and Alarm Channel Configuration

The **AMG5615A6** transmit unit sends and receives data to/from an **AMG5616A6** or rackmount equivalent **AMG5616A6R** receive unit. The physical data interface RS-485, RS-422 or RS-232 is selectable by the user with the slide switch mounted on the main PCB inside the enclosure.

There are also 2 uni-directional alarm inputs provided for each video channel. Each alarm input is typically connected to a contact closure switch.

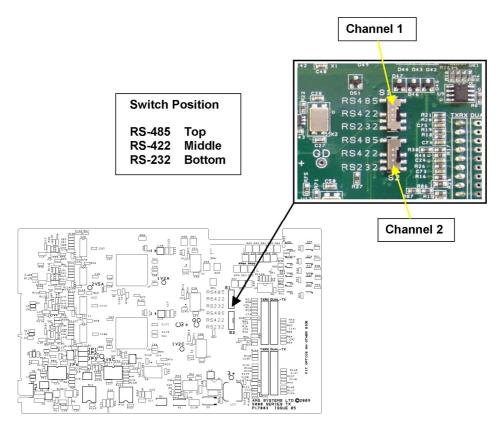

Data Channel Configuration

Each low speed data channel provides an RS-232, RS-422 (full duplex, four wire) or RS-485 (half duplex, two wire) interface defined by the corresponding mode switch inside the enclosure. Every data channel as shipped from the factory is set up for RS-485 operation unless otherwise requested.

The data input for both the RS-485 and the RS-422 modes detects a tri-state input condition by monitoring the differential voltage level across the input. A differential level below 600mV positive or negative will be detected as a tri-state condition. A level above 600mV positive or negative will be detected as a logic 1 or logic 0 respectively. It is important therefore to terminate the RS-485 bus or the RS-422 input bus using 120Ω if a pre-bias is present on the RS-485 or RS-422 bus.

A large number of third party equipment manufacturers apply a pre-bias on their RS-485 bus. This prebias is applied by pulling one arm of the RS-485 bus high (+5 volts) and the other arm low (0 volts) using high value resistors within the third party equipment. In order to ensure that the AMG equipment detects a tri-state condition, then these resistors should have a value above 5k Ω . If the third party bias resistors are less the 750 Ω the bus can be multiple terminated as required to ensure that a tristate level is detected.

The system detects a tri-state input condition on the data channel bus when in RS-485 or RS-422 mode.

AMG Systems Ltd. reserves the right to make changes to this document without notice. The information herein is believed to be accurate. No responsibility is assumed by AMG for its use.

Page 7 of 12

Data Interface Connections

Connector Pin No.	Data Channel		
	RS-485 [switch top]	RS-422 [switch middle]	RS-232 [switch bottom]
1		IN + (A)	IN
2		IN - (B)	
3	GND	GND	GND
4			
5			
6			
7	IN/OUT + (A)	OUT + (A)	
8	IN/OUT - (B)	OUT - (B)	OUT

Note: (A) or (B) in brackets in the above table refers to RS-485 / RS-422 data specification.

Alarm Channel Configuration

The **AMG5615A6** provides 2 uni-directional alarm / contact closure inputs. Each alarm input is typically connected to a contact closure switch.

Each ALARM IN+ input incorporates a 330R pull-up resistor to the internal +3V3 supply.

Connector Pin	Alarm Interface		
No.	Alarm 1	Alarm 2	
1			
2			
3	ALARM 1 GND		
4	ALARM 1 IN +		
5		ALARM 2 GND	
6		ALARM 2 IN +	
7			
8			

Alarm Interface Connections

Physical Information

Dimensions

Height	112mm
Width	
Depth	
Weight	200grams

Mounting Details

The AMG unit is supplied with a clip-on mounting bracket which should be attached to a panel or wall using 2 off 4.0mm screws, see diagram on page 1 for dimensions. The unit is clipped into the mounting bracket, and is then held firmly in position.

Safety

AMG Optical Fibre Products use Class 1 laser systems in accordance with EN 60825-2:2000.

It is always advisable to follow good practice when working with optical fibre systems. This includes:

- Do not stare with unprotected eyes or with any unapproved collimating device at fibre ends or connector faces, or point them at other people.
- Use only approved filtered or attenuating viewing aids

For other safety issues and advice on good practice associated with optical fibre systems, please see EN 60825-2:2000 or your local safety officer.

Maintenance and Repair

There are no user serviceable parts within AMG products. See unit data sheet for full specification.

In case of problem or failure, please call your local support centre or contact: **AMG Systems Ltd.** at 3 The Omega Centre, Stratton Business Park, Biggleswade, Beds., SG18 8QB, UK.

Phone Technical Support Email +44 (0) 1767 600 777 +44 (0) 1767 604 491 techsupport@amgsystems.com This page is intentionally blank.

This page is intentionally blank.

AMG Systems Ltd. reserves the right to make changes to this document without notice. The information herein is believed to be accurate. No responsibility is assumed by AMG for its use.

Page 11 of 12

AMG5615A6 Instruction Sheet D20085-01.doc

This page is intentionally blank.