


AMG5914-2A9 Instruction Manual

Single Channel Video Receive Unit with two Bi-directional Data Channels, 2 Bi-directional Audio Channels, eight Bi-directional Alarms plus Ethernet for a Singlemode Fibre Link

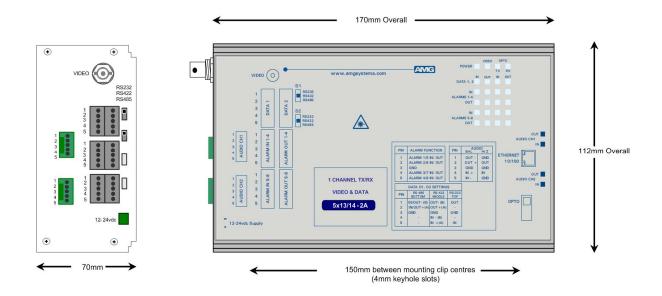

The **AMG5914-2A9** is a stadalone one channel video receive unit designed to receive 1 video signal and transmit and receive 2 data signals, 2 audio channels plus 8 bi-directional alarms and also provides full duplex 100Base-T Ethernet connectivity over one Singlemode optical fibre.

The AMG5914-2A9 is designed to be powered using an AMG2001 standalone power supply.

The **AMG5914-2A9** is designed to operate with an **AMG5913-2A9** or **AMG5913-2A9R** video transmit unit in a point to point configuration. The R suffix in the partno. indicates a rackmount configuration.

Contents

Introduction	3
Unit Functional Schematic	
Optical Connection	
Ethernet Operation	
Connections	4
Power Connection	4
Video Output Connections	4
Optical Connection Singlemode	4
Data and Alarm Channel Connections	
Audio Connections	
Ethernet Connection	5
Front Panel Indicators	6
Power LEDLow Speed Data LEDs	
Alarm LEDs	
Ethernet Data LEDs.	
Audio LEDs	
Data and Alarm Channel Configuration	8
Data Channel Configuration	8
Data Interface Connections	8
Data Channel Termination	
Alarm Channel Configuration	
Alarm Channel Circuit	
Alarm Interface Connections	10
Audio Channel Configuration	11
Audio Channel Configuration	
Audio Interface Connections Ch1 & Ch2	
Physical Information	12
Dimensions	12
Mounting Details	12
Safety	12
Maintanan as and Danain	40
Maintenance and Repair	12


Introduction

Unit Functional Schematic

The **AMG5914-2A9** receives 1 video, 2 data channels, 2 bi-directional audio signals and 8 bi-directional alarm signals from the **AMG5913-2A9** transmit unit.


It also transmits 2 data channels, 2 bidirectional audio signals and 8 bidirectional alarms to the **AMG5913-2A9**.

Ethernet connectivity is also provided between the two units.

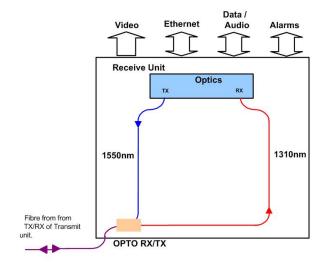

Optical Connection

The **AMG5914-2A9** connections are illustrated in the following example which shows an **AMG5913-2A9** single channel transmit unit together with a **AMG5914-2A9** configured as a point to point system.

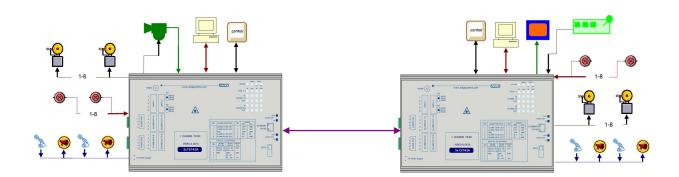

Ethernet Operation

The Ethernet interface supports 100Mbit/s full duplex operation only. Data is transmitted from one port the other port with minimum delay or buffering.

The port implements "Auto MDI/MDIX" i.e. it may be connected with either a straight-though or crossover cable to an appropriate device such as external switch, PC or other DCE/DTE.

Two LED indicators are provided adjacent to the RJ-45 port: Green indicates Link / Data transfer and Yellow indicates no Ethernet connection.

Connections

Power	Cann	oction
Power	ı .nnn	ection

Connector TypeRemovable 2-pin, 3.81mm, Screw Terminal

Connector Partno......Phoenix 1803578
Supply Voltage.....+12 to +15 Volts DC

Maximum Power 5 Watts

Video Output Connections

Connectors	75 ohm BNC Socket.
Output Impedance	75 ohm terminated.
Output Level	1 Volt p-p nominal
Frequency Response	10Hz to 7MHz.

Optical Connection Singlemode

Optical Fibre	
Primary Optical Launch Power Transmit Wavelength	
Primary Optical SensitivityReceive Wavelength	

Minimum Optical Dynamic Range20dB.

Data and Alarm Channel Connections

No. of Data Channels	2
No. of Alarms	8

ConnectorsRemovable 5-pin, 3.5mm, Spring Terminal

Connector Partnos......Phoenix 1952296

Data InterfacesRS-232 / 422 / 485. Selected by external slide switches D1-D2

RS-232 - Switch Position - Top

RS-422 - Switch Position - Middle

RS-485 - Switch Position - Bottom

Internal 120Ω termination resistors may be applied to RS-422 or RS-485 inputs as required by internal DIL switches inside the enclosure. *See appropriate section on how to remove the case for access to the DIL switches.

Audio Connections

No. of Audio Channels.....2

Connector Partno......Phoenix 1881354

Input level0dBm
Input overload level+6dBm

Input impedance $10k\Omega$ / 600Ω Output impedance600Ω Frequency response 10Hz to 20KHz

Audio Input impedance is selected by removable jumper JP1 or JP2 on Audio Expansion board inside enclosure. *See appropriate section on how to remove the case for access to the data/audio switches. 1-2 – High Impedance $10k\Omega$

- 2-3 Balanced 600Ω

Ethernet Connection

Ethernet Data Connector	RJ45
Interface	Auto MDI/MDIX 100BASE-TX
Ethernet Data Rate	Maximum 100Mb/s full duplex

Front Panel Indicators

Power LED			
POWERGr	een	-	Power is present
(Off	-	Power is not present
VIDEOGr	een	_	Video output signal is present
	Off	_	Video input signal is not present
`	O11		video input digital le flet precent
OPTO TXGr	een	_	Tx opto. present
(Off	-	Tx opto. is not present
OPTO RXGr		-	Rx opto. sync.
(Off	-	Rx opto. is not sync.
Low Speed Data LEDs			
Data Present IN (RS485 or RS422) Gr	een	-	logic zero (+V, -V) present on IN+, IN-
		-	logic one (-V,V+) present on IN+, IN-
(Off	-	tri-state off or no connection on IN+, IN-
Data Present IN (RS232)Gr	een	_	logic zero (+V) present on input IN+
· · · · · · · · · · · · · · · · · · ·		_	logic transitions present on input IN+
	Off	_	logic one (-V) present on input IN+
	- ··		
IN corresponds to the data signals being	transmit	tted ont	o the optical fibre.

Data Present OUT (RS485 or RS422) Green logic zero (+V,-V) present on OUT+, OUTlogic one (-V,+V) present on OUT+, OUT-Red tri-state off or no connection on OUT+, OUT-Off Data Present OUT (RS232).....Green logic zero (+V) present on OUT+ logic transitions present on OUT+ Red Off logic one (-V) present on OUT+

OUT corresponds to the data signals being received from the optical fibre.

Alarm LEDs

Cr	nannels	1-8
Λ١	A DM IN	J

ALARM IN	Green Off	Alarm ON / Contacts closed. Alarm OFF / Contacts open.
ALARM OUT	Green Off	Alarm ON / Contacts closed. Alarm OFF / Contacts open.

Ethernet Data LEDs			
Link not Present		-	Link not present
	Off	-	Link is present
Link Integrity	.Green	-	Link integrity is good, Idle state
	GBlink	-	Data transfer
	Off	-	Link not present

Audio LEDs

Audio Present TX Green - audio present > -40dBm

Red - audio present > 0dBm (overload at +6dBm)

Off - audio not present or < -40dBm

This represents the audio signals being transmitted on the optical fibre

Audio Present RX...... Green - audio present > -40dBm

Red - audio present > 0dBm (overload at +6dBm)

Off - audio not present or < -40dBm

This represents the audio signals being received from the optical fibre.

Data and Alarm Channel Configuration

The **AMG5914-2A9** receive unit sends and receives data to/from an **AMG5913-2A9** or rackmount equivalent **AMG5913-2A9R** transmit unit. The 2 physical data interfaces RS-485, RS-422 or RS-232 are individually selectable by the user with the slide switch mounted from the rear panel.

There are also 8 bi-directional alarm inputs provided, each alarm input is typically connected to a contact closure switch. Each alarm output can receive an on/off signal from an **AMG5913-2A9** and is typically used to convey contact closure status.

Data Channel Configuration

Each low speed data channel provides an RS-232, RS-422 (full duplex, four wire) or RS-485 (half duplex, two wire) interface defined by the corresponding mode switch inside the enclosure. Every data channel as shipped from the factory is set up for RS-485 operation unless otherwise requested.

The data input for both the RS-485 and the RS-422 modes detects a tri-state input condition by monitoring the differential voltage level across the input. A differential level below 600mV positive or negative will be detected as a tri-state condition. A level above 600mV positive or negative will be detected as a logic 1 or logic 0 respectively. It is important therefore to terminate the RS-485 bus or the RS-422 input bus using 120Ω if a pre-bias is present on the RS-485 or RS-422 bus.

A large number of third party equipment manufacturers apply a pre-bias on their RS-485 bus. This pre-bias is applied by pulling one arm of the RS-485 bus high (+5 volts) and the other arm low (0 volts) using high value resistors within the third party equipment. In order to ensure that the AMG equipment detects a tri-state condition, then these resistors should have a value above $5k\Omega$. If the third party bias resistors are less the 750Ω the bus can be multiple terminated as required to ensure that a tri-state level is detected.

The system detects a tri-state input condition on the data channel bus when in RS-485 or RS-422 mode.

Data Interface Connections

	Data Channel			
Connector Pin No.	RS-485 [switch bottom]	RS-422 [switch middle]	RS-232 [switch top]	
1	IN/OUT - (B)	OUT - (B)	OUT	
2	IN/OUT + (A)	OUT + (A)		
3	GND	GND	GND	
4		IN - (B)		
5		IN + (A)	IN	

Note: (A) or (B) in brackets in the above table refers to RS-485 / RS-422 data specification.


Data Channel Termination

The interface mode RS-232, RS-422 or RS-485 of each data port Data 1-4, is selected with the corresponding external slide switch D1-D4. The actual number of data channels provided on the unit depends upon the AMG model.

Internal 120Ω termination resistors across IN+ and IN- inputs may also be applied when in RS-422 or RS-485 mode using internal DIP switches P0-P3 on the main PCB inside the enclosure. P0-P3 may

be accessed by removing the 2 fixing screws in the rear panel and sliding the PCB out of the enclosure.

For clarity, in the 3 examples shown below all 4 data ports D1-D4 are terminated the same, but each data channel may be configured & terminated independently as required. The 3 examples shown are RS-232 (no termination), RS-422 (120Ω) or RS-485 (120Ω).

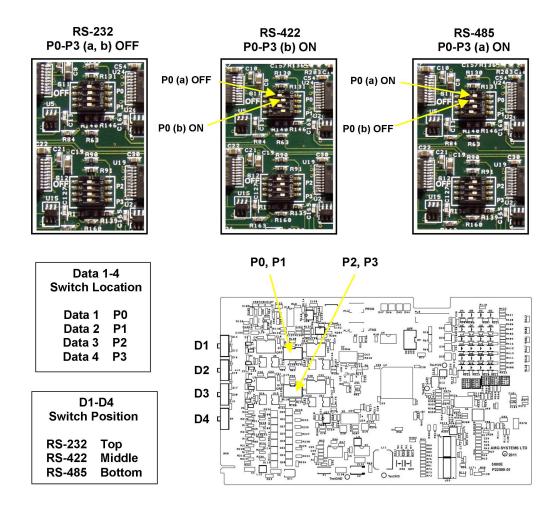

Alarm Channel Configuration


The AMG5914-2A9 provides 8 bi-directional contact closure inputs / alarm outputs.

Each ALARM IN input is via an internal $10k\Omega$ series resistor with a $47k\Omega$ pull-up resistor to the internal +3V3 supply.

Each ALARM OUT output can receive an on/off signal from an **AMG5913-2A9** and is typically used to convey contact closure status. Each alarm output is NPN open collector, maximum load 500mA / 24Vdc.

Alarm Channel Circuit

The output of each alarm channel is an NPN open collector transistor circuit, with an absolute maximum rating of 1A / 60V. There is a common GND for all alarm channels.

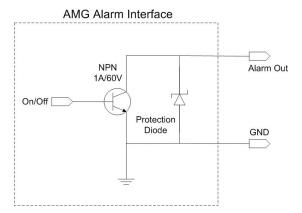

The alarm output circuit is designed for low dc voltage / low current operation and has minimal internal protection. If an alarm output is used to drive an external relay circuit, the external crcuit MUST include a protection (flyback) diode connected across the relay to prevent the high voltage generated from a back EMF causing damage due to the AMG output transistor.

Alarm Interface Connections

Connector Pin	Alarm Interfaces		
No.	Alarm IN 1-4, 5-8	Alarm OUT 1-4 , 5-8	
1	ALARM 1/5 IN	ALARM 1/5 OUT	
2	ALARM 2/6 IN	ALARM 2/6 OUT	
3	GND	GND	
4	ALARM 3/7 IN	ALARM 3/7 OUT	
5	ALARM 4/8 IN	ALARM 4/8 OUT	

Audio Channel Configuration

Audio Channel Configuration

The AMG5914-2A9 provides two bi-directional audio channels.

Each audio channel input can be configured as a single-ended high impedance $10k\Omega$ input with GND reference or alternativly as a balanced 600Ω input pair. The input impedance is selected using jumpers on the audio expansion board JP1 (Channel 1) or JP2 (Channel 2), the default setting is balanced 600Ω .

JP1/JP2 1-2 – High Impedance 10kΩ

JP1/JP2 2-3 – Balanced 600Ω

Audio Interface Connections Ch1 & Ch2

Connector Pin No.	Balanced Input 600Ω	High Z input 10kΩ
1	OUT -	OUT -
2	OUT +	OUT +
3	GND	GND
4	IN +	IN
5	IN -	GND

Physical Information

Dimensions

Height	.112mm
Width	
Depth	.70mm
Weight	

Mounting Details

The AMG unit is supplied with a clip-on mounting bracket which should be attached to a panel or wall using 2 off 4.0mm screws, see diagram on page 1 for dimensions. The unit is clipped into the mounting bracket, and is then held firmly in position.

Safety

AMG Optical Fibre Products use Class 1 laser systems in accordance with EN 60825-2:2000.

It is always advisable to follow good practice when working with optical fibre systems. This includes:

- Do not stare with unprotected eyes or with any unapproved collimating device at fibre ends or connector faces, or point them at other people.
- Use only approved filtered or attenuating viewing aids

For other safety issues and advice on good practice associated with optical fibre systems, please see EN 60825-2:2000 or your local safety officer.

Maintenance and Repair

There are no user serviceable parts within AMG products. See unit data sheet for full specification. In case of problem or failure, please call your local support centre or contact: **AMG Systems Ltd.** at 3 The Omega Centre, Stratton Business Park, Biggleswade, Beds., SG18 8QB, UK.

Phone +44 (0) 1767 600 777 Technical Support +44 (0) 1767 604 491

Email techsupport@amgsystems.com